



RICCAR PARTS BOOK

**CORDLESS SUPRALITE MODEL ALL VERSIONS
R10CV R10CV.2 R10CV.4 R10CV.6**

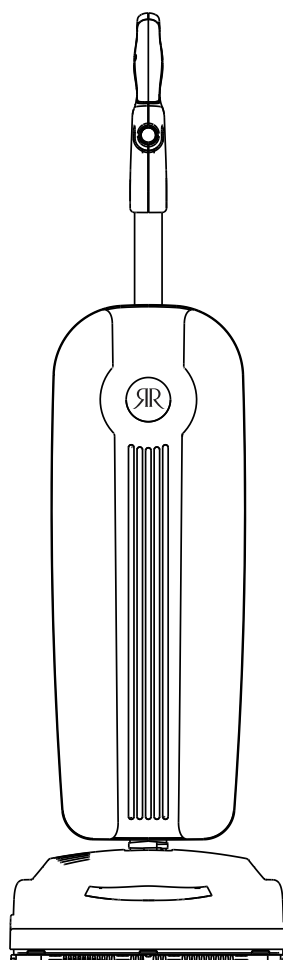


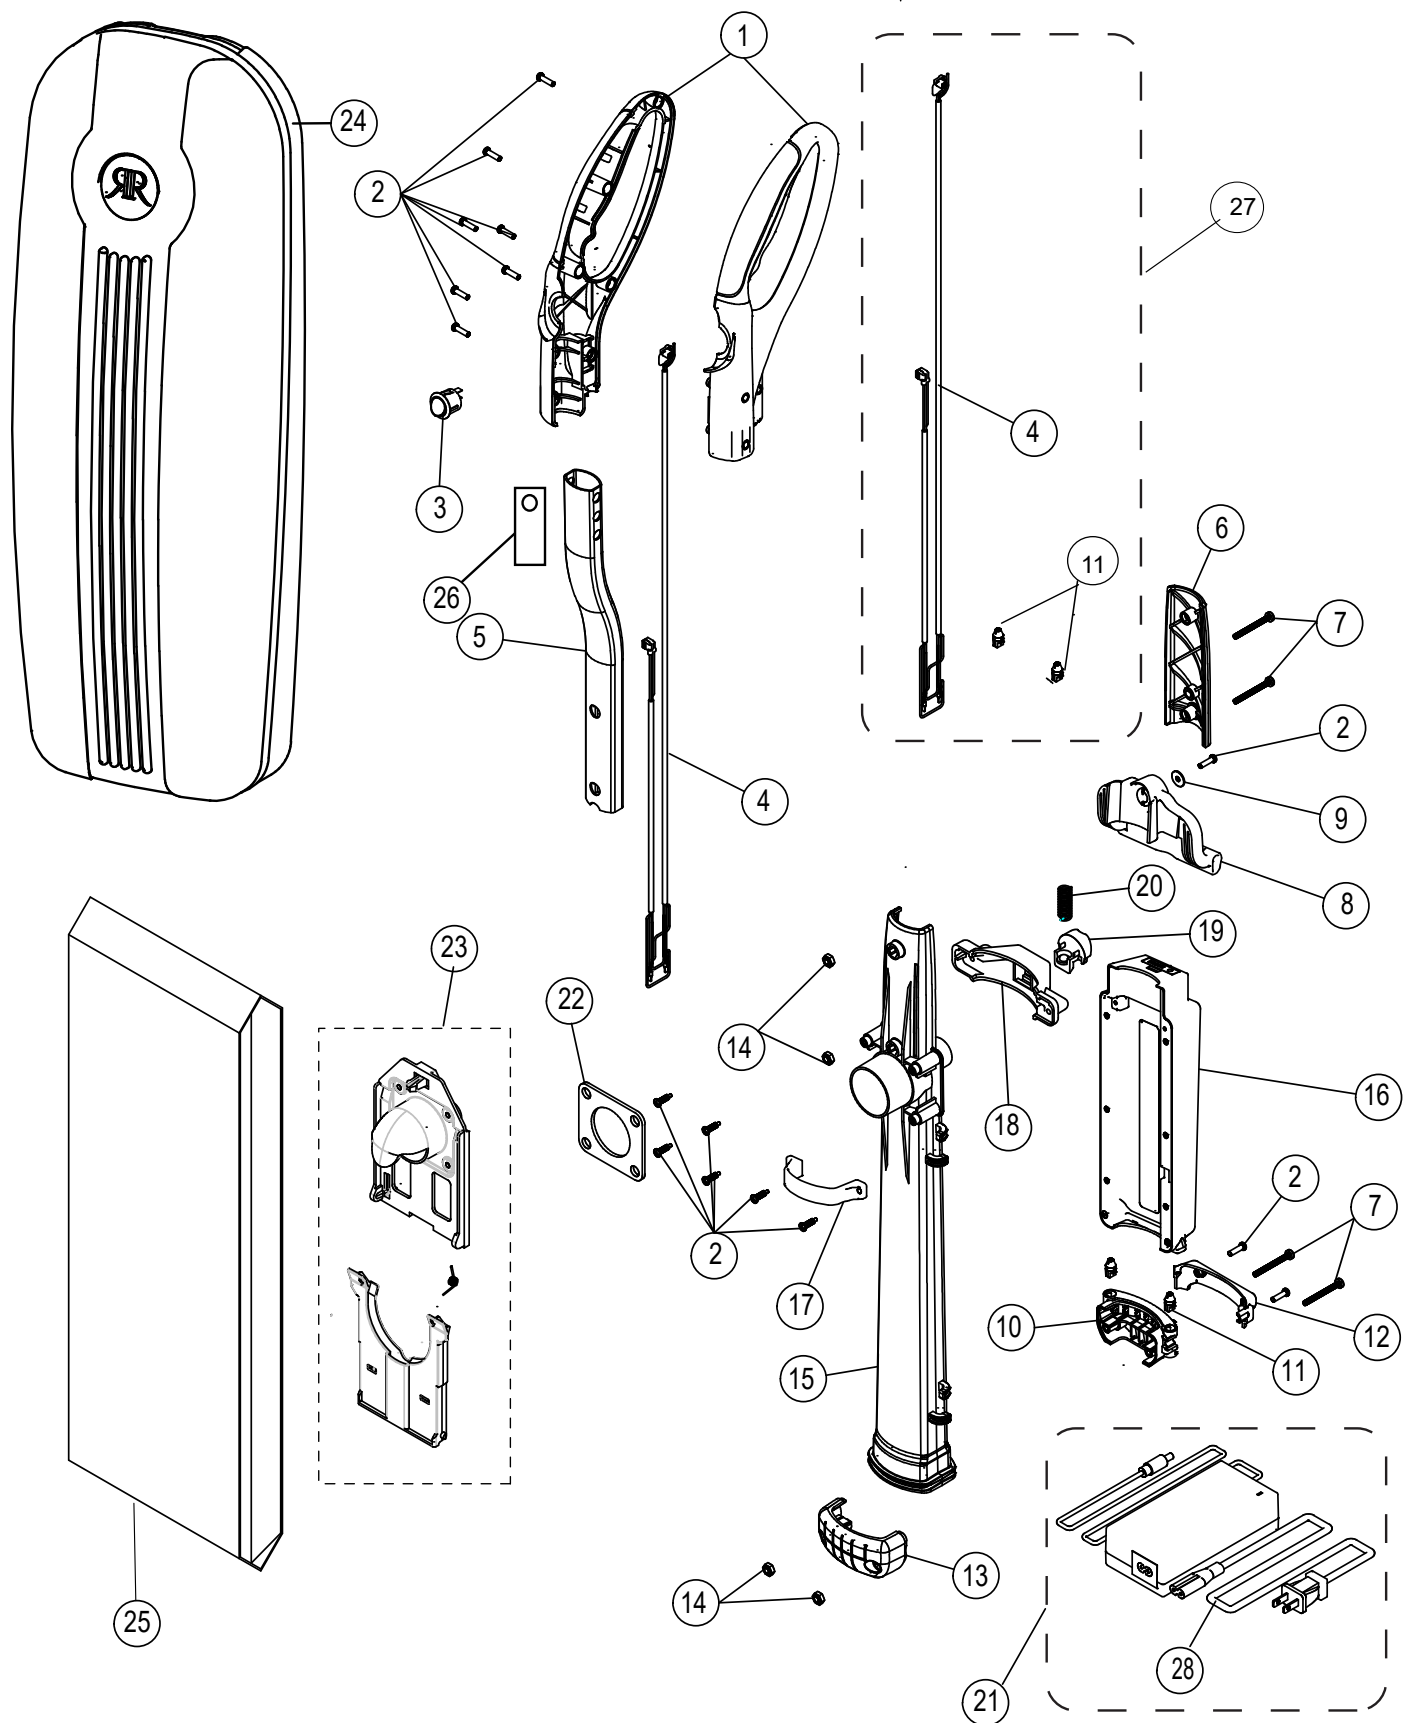

HANDLE AND MAIN BODY

Riccar Model R10CV


KEY	PART NUMBER	DESCRIPTION
1	C223-0114	Handle Grip Assembly
2	A732-8314	Screw
3	A328-1500	Switch
4	B223-1500B	Handle Harness Fixed Battery - Requires Part # B223-1300 (R10CV, R10CV.2)
	Not Available See #27	Handle Harness Removable Battery (R10CV.4, R10CV.6)
5	B220-3400	Handle Tube
6	B220-3114	Handle Back Cover
7	A432-0705	Screw
8	B223-0314	Carry Handle
9	A733-5100	Washer
10	B223-0914	Neck Coupling Back
11	Not Available See #27	Post For Battery ULW
12	B223-1014	Cable Cover
13	B220-1014	Neck Coupling Front
14	A432-0805	Hex Nut
15	B220-3014C	Handle Duct
16	C223-1800B	Battery
17	B223-0814	Battery Clamp
18	B223-4014	Latch Case (R10CV.4, R10CV.6)
19	B223-4197	Latch Button (R10CV.4, R10CV.6)
20	A224-0600	Latch Spring (R10CV.4, R10CV.6)
21	C223-2000B	Charger
22	B220-3900	Bag Mount Seal
23	D484-2282	Bag Mount Assembly
24	D220-5100	Hard Shell Bag
25	B220-5382C	HEPA Bag (Bulk Single)
	B220-5382D	Charcoal/HEPA Bag (Bulk Single)
	Not Available	HEPA Bag (6 pack)
	RLHC-6	Charcoal/HEPA (6 pack)
	B211-8800	Paper Bag (Bulk Single)
26	B388-5900	Polyurethane Handle Spacer
27	D223-6000	Wire Harness DC Handle/PCB Commercial # 4 for .4 and above with Two # 11 Posts For Battery ULW

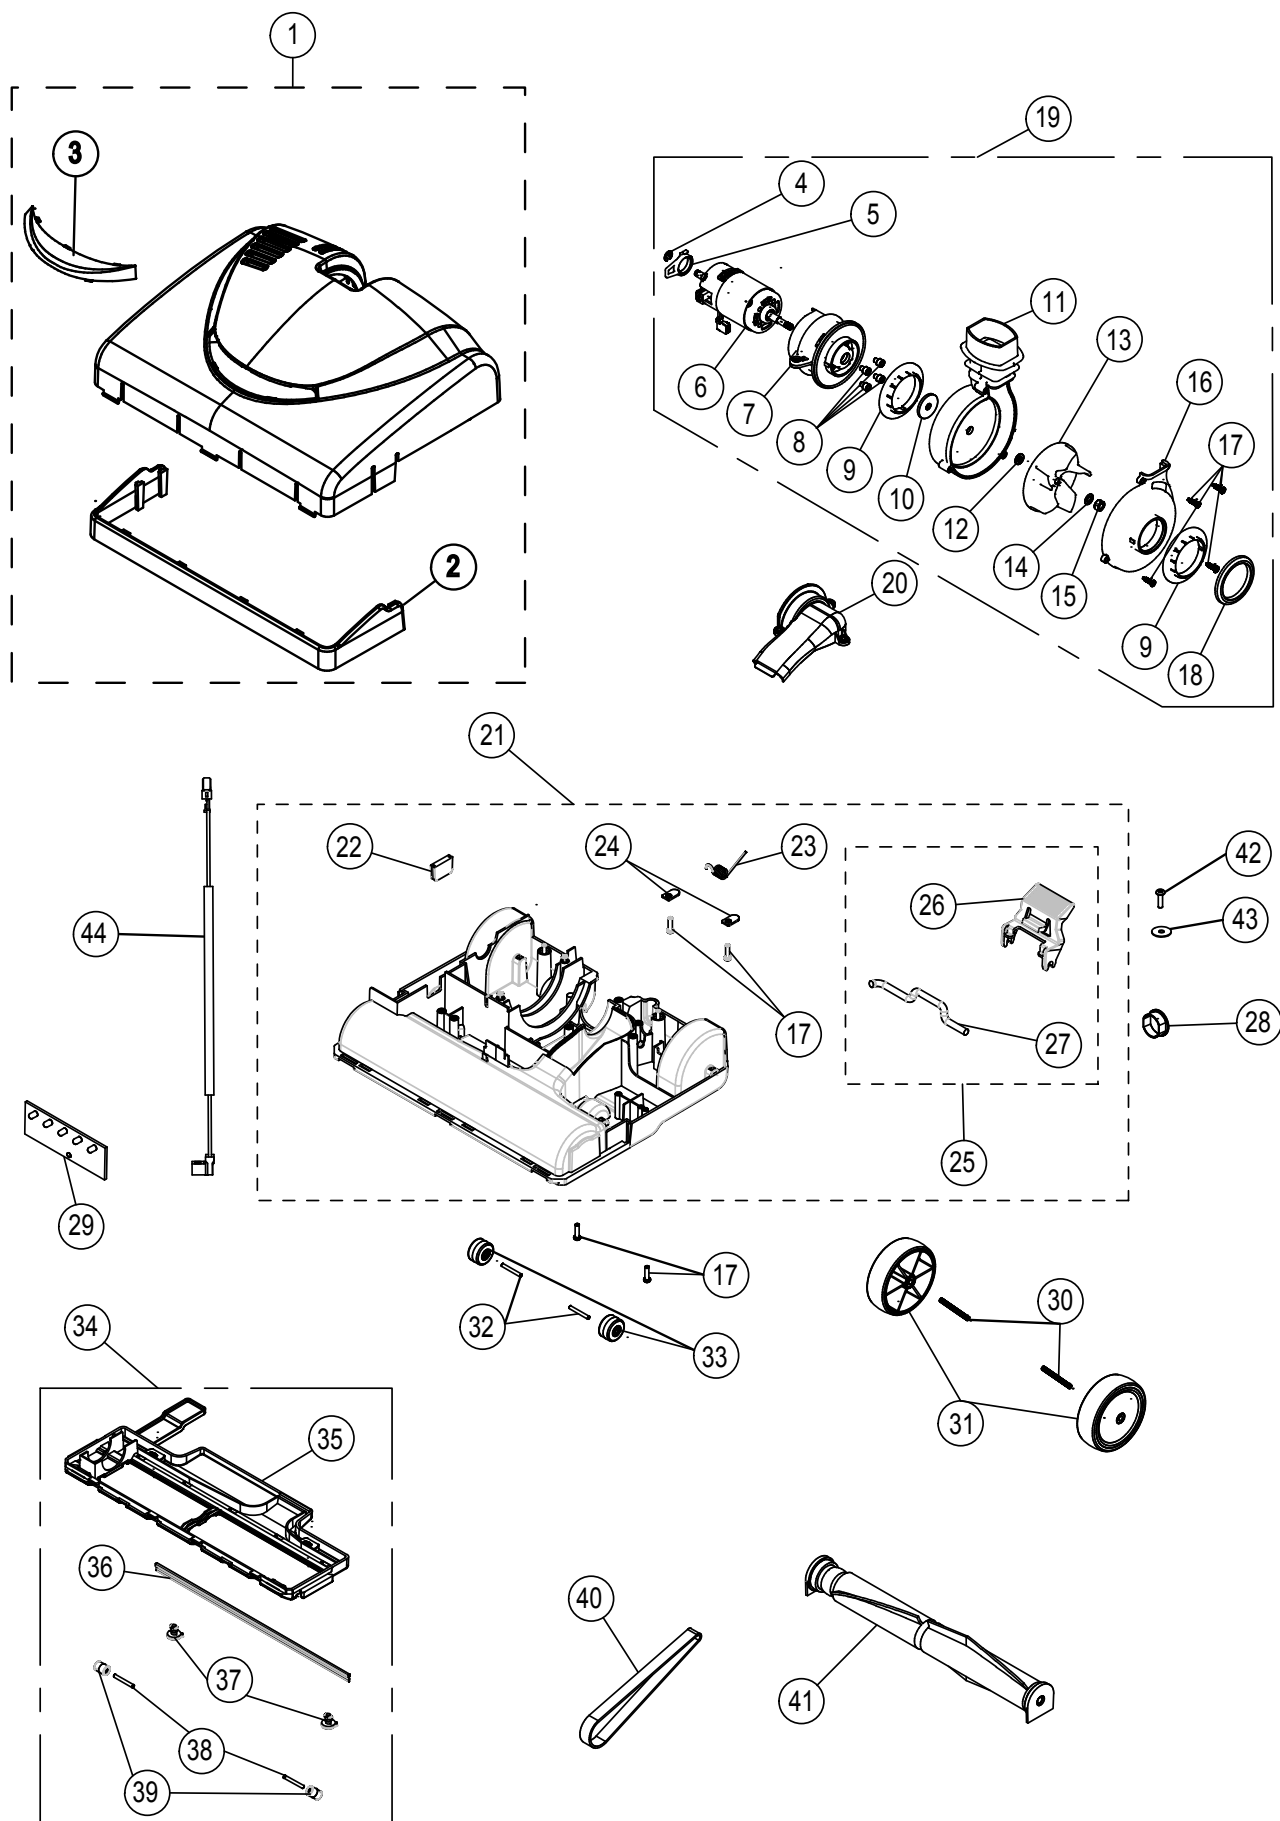

NOZZLE ASSEMBLY

Riccar Model R10CV

KEY	PART NUMBER	DESCRIPTION	KEY	PART NUMBER	DESCRIPTION
1	D223-0300	Nozzle Cover Assembly	34	D220-0414	Baseplate Assembly
2	B220-2614	Furniture Guard	35	Order #34	Baseplate
3	B018-0415	Lens	36	B015-3000B	Squeegee
4	A732-3000	E Clip	37	B220-0414	Baseplate Cover Screw
5	B223-2814C	Motor Support Boss	38	B370-1700B	Baseplate Wheel Axle
6	Order D223-2100	14,000 RPM Motor	39	B370-1843	Baseplate Wheel
7	B223-0114	Motor Housing	40	B014-0814B	Belt (Single)
8	A733-5000	Screw M5 X 6mm Socket		ULW-B2	Belt (2 pack)
9	B220-4414	Pivot Bushing	41	D223-1700	Wood Agitator with White Bristles (R10CV, R10CV.2, R10CV.4)
10	B220-4500	Felt Pivot Seal		D012-2300	Steel Agitator with White Bristles (R10CV.6)
11	B220-4014	Scroll Housing Right	42	A732-2500	Combination Screw M4 X 12 ULW
12	A733-3300	Washer (Behind Fan)	43	B034-0100	Strain Relief Washer
13	B220-4314	Motor Fan	44	B223-1600B	Nozzle Wire Harness Fixed Battery - Requires Part # B223-1300 (R10CV, R10CV.2)
14	A733-2200	Washer		Not Available See Handle And Main Body Assembly #27	Harness Removable Battery (R10CV.4, R10CV.6)
15	A432-0605	Hex Nut			
16	B220-4114	Scroll Housing Left			
17	A732-8314	Pan Head Hi Lo Screw #8 X 5/8			
18	B480-4514	Motor Inlet Seal			
19	D223-2100	Motor Assembly			
20	B220-0214	Inlet Duct Cover			
21	D220-0114	Basetray Assembly			
22	B016-1914	Basetray Plug			
23	B220-0900	Upright Stop Spring			
24	54.136	Rear Axle Clamp			
25	D220-0714	Upright Stop Pedal Assembly			
26	B220-0714	Upright Stop Pedal			
27	B220-0800	Upright Stop Pedal Pivot			
28	A018-1414	Hole Plug			
29	B317-1100K	LED Board Fixed Battery (R10CV, R10CV.2)			
	B317-1150K	LED PC Board Removable Battery (R10CV.4, R10CV.6)			
30	B010-2800C	Large Wheel Axle			
31	C220-0531C	Rear Wheel			
32	B010-0001E	Front Wheel Axle			
33	C010-2714B	Front Wheel W/Bushing			

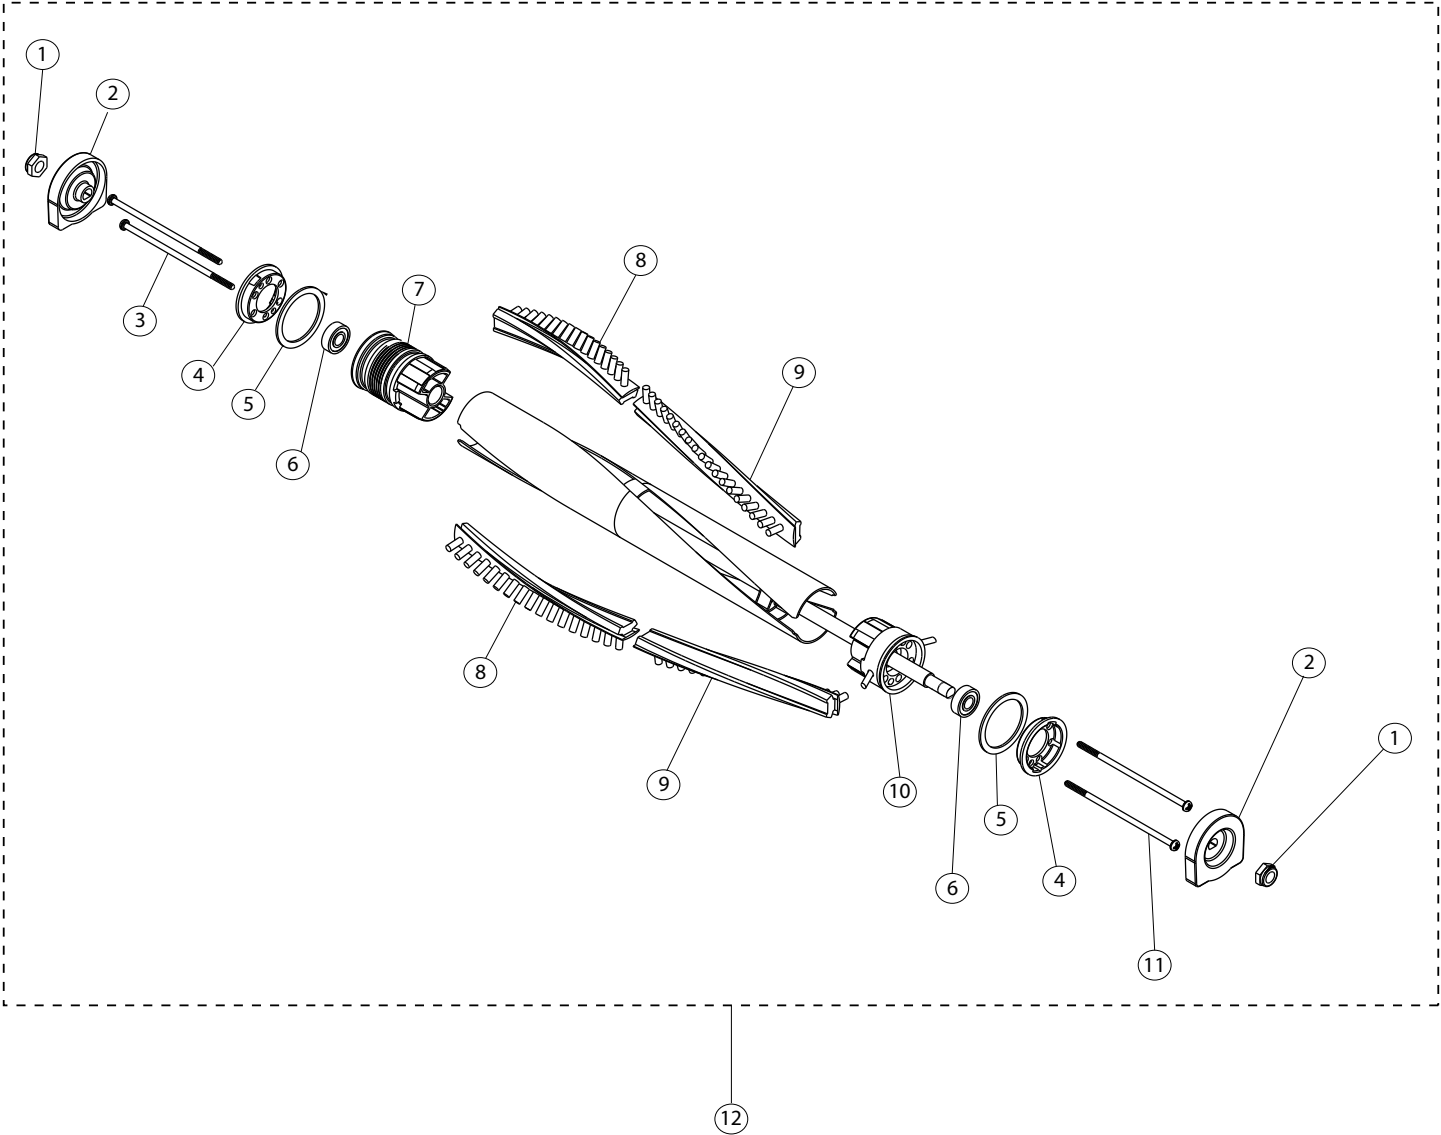

KEY	PART NUMBER	DESCRIPTION
1	A375-0100	1/4 - 28 Locking Hex Nut
2	B013-1600	Metal End Cap
3	A733-1810	Screw Pulley End 80mm
4	B475-1900	Retainer Ring
5	B375-3900	Felt Seal
6	A375-0200	Bearing
7	B220-1200	Pulley Clamping Design for Flat Belt
8	B013-0301B	Short Brush Strip White
9	B013-0401B	Long Brush Strip White
10	B013-1500	Agitator Bearing Holder With Edge Brushes Clamping Design
11	A733-1800	Screw Non-Pulley End 40mm
12	D012-2300	Steel Agitator Assembly White Brushes