
USER MANUAL




V.4.16.21

YMOP COMPONENTS

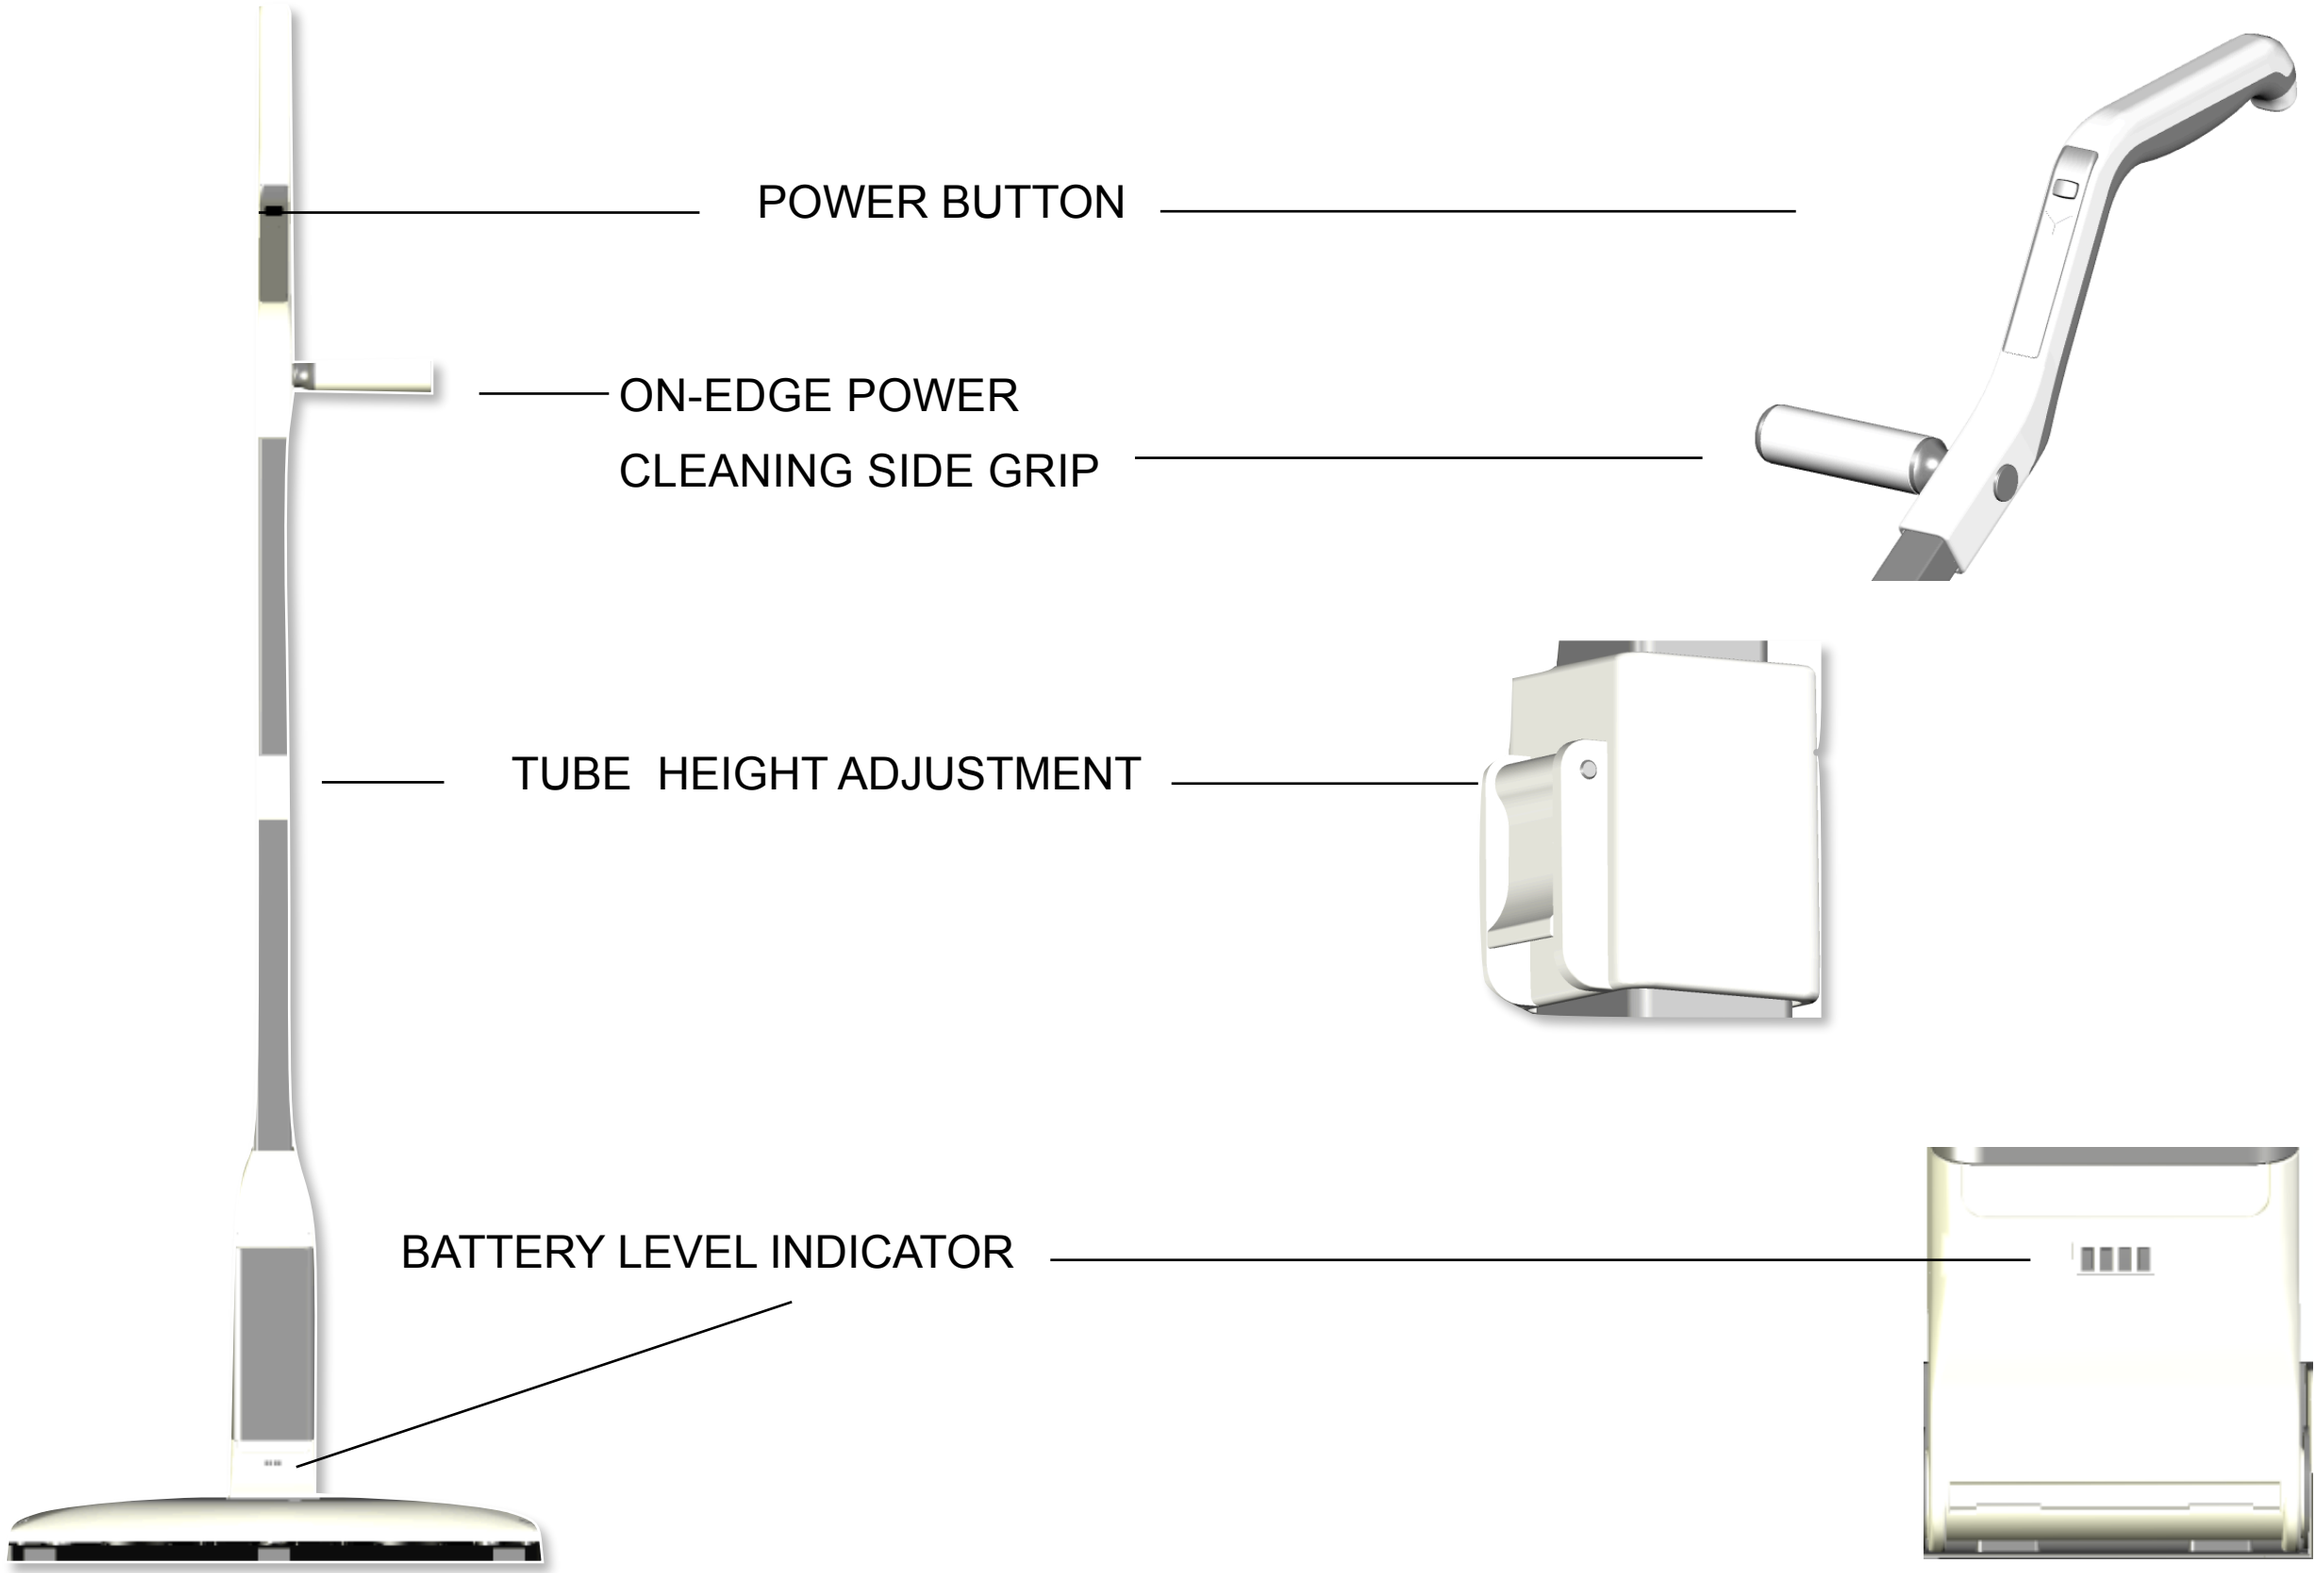

YMOP COMPONENTS

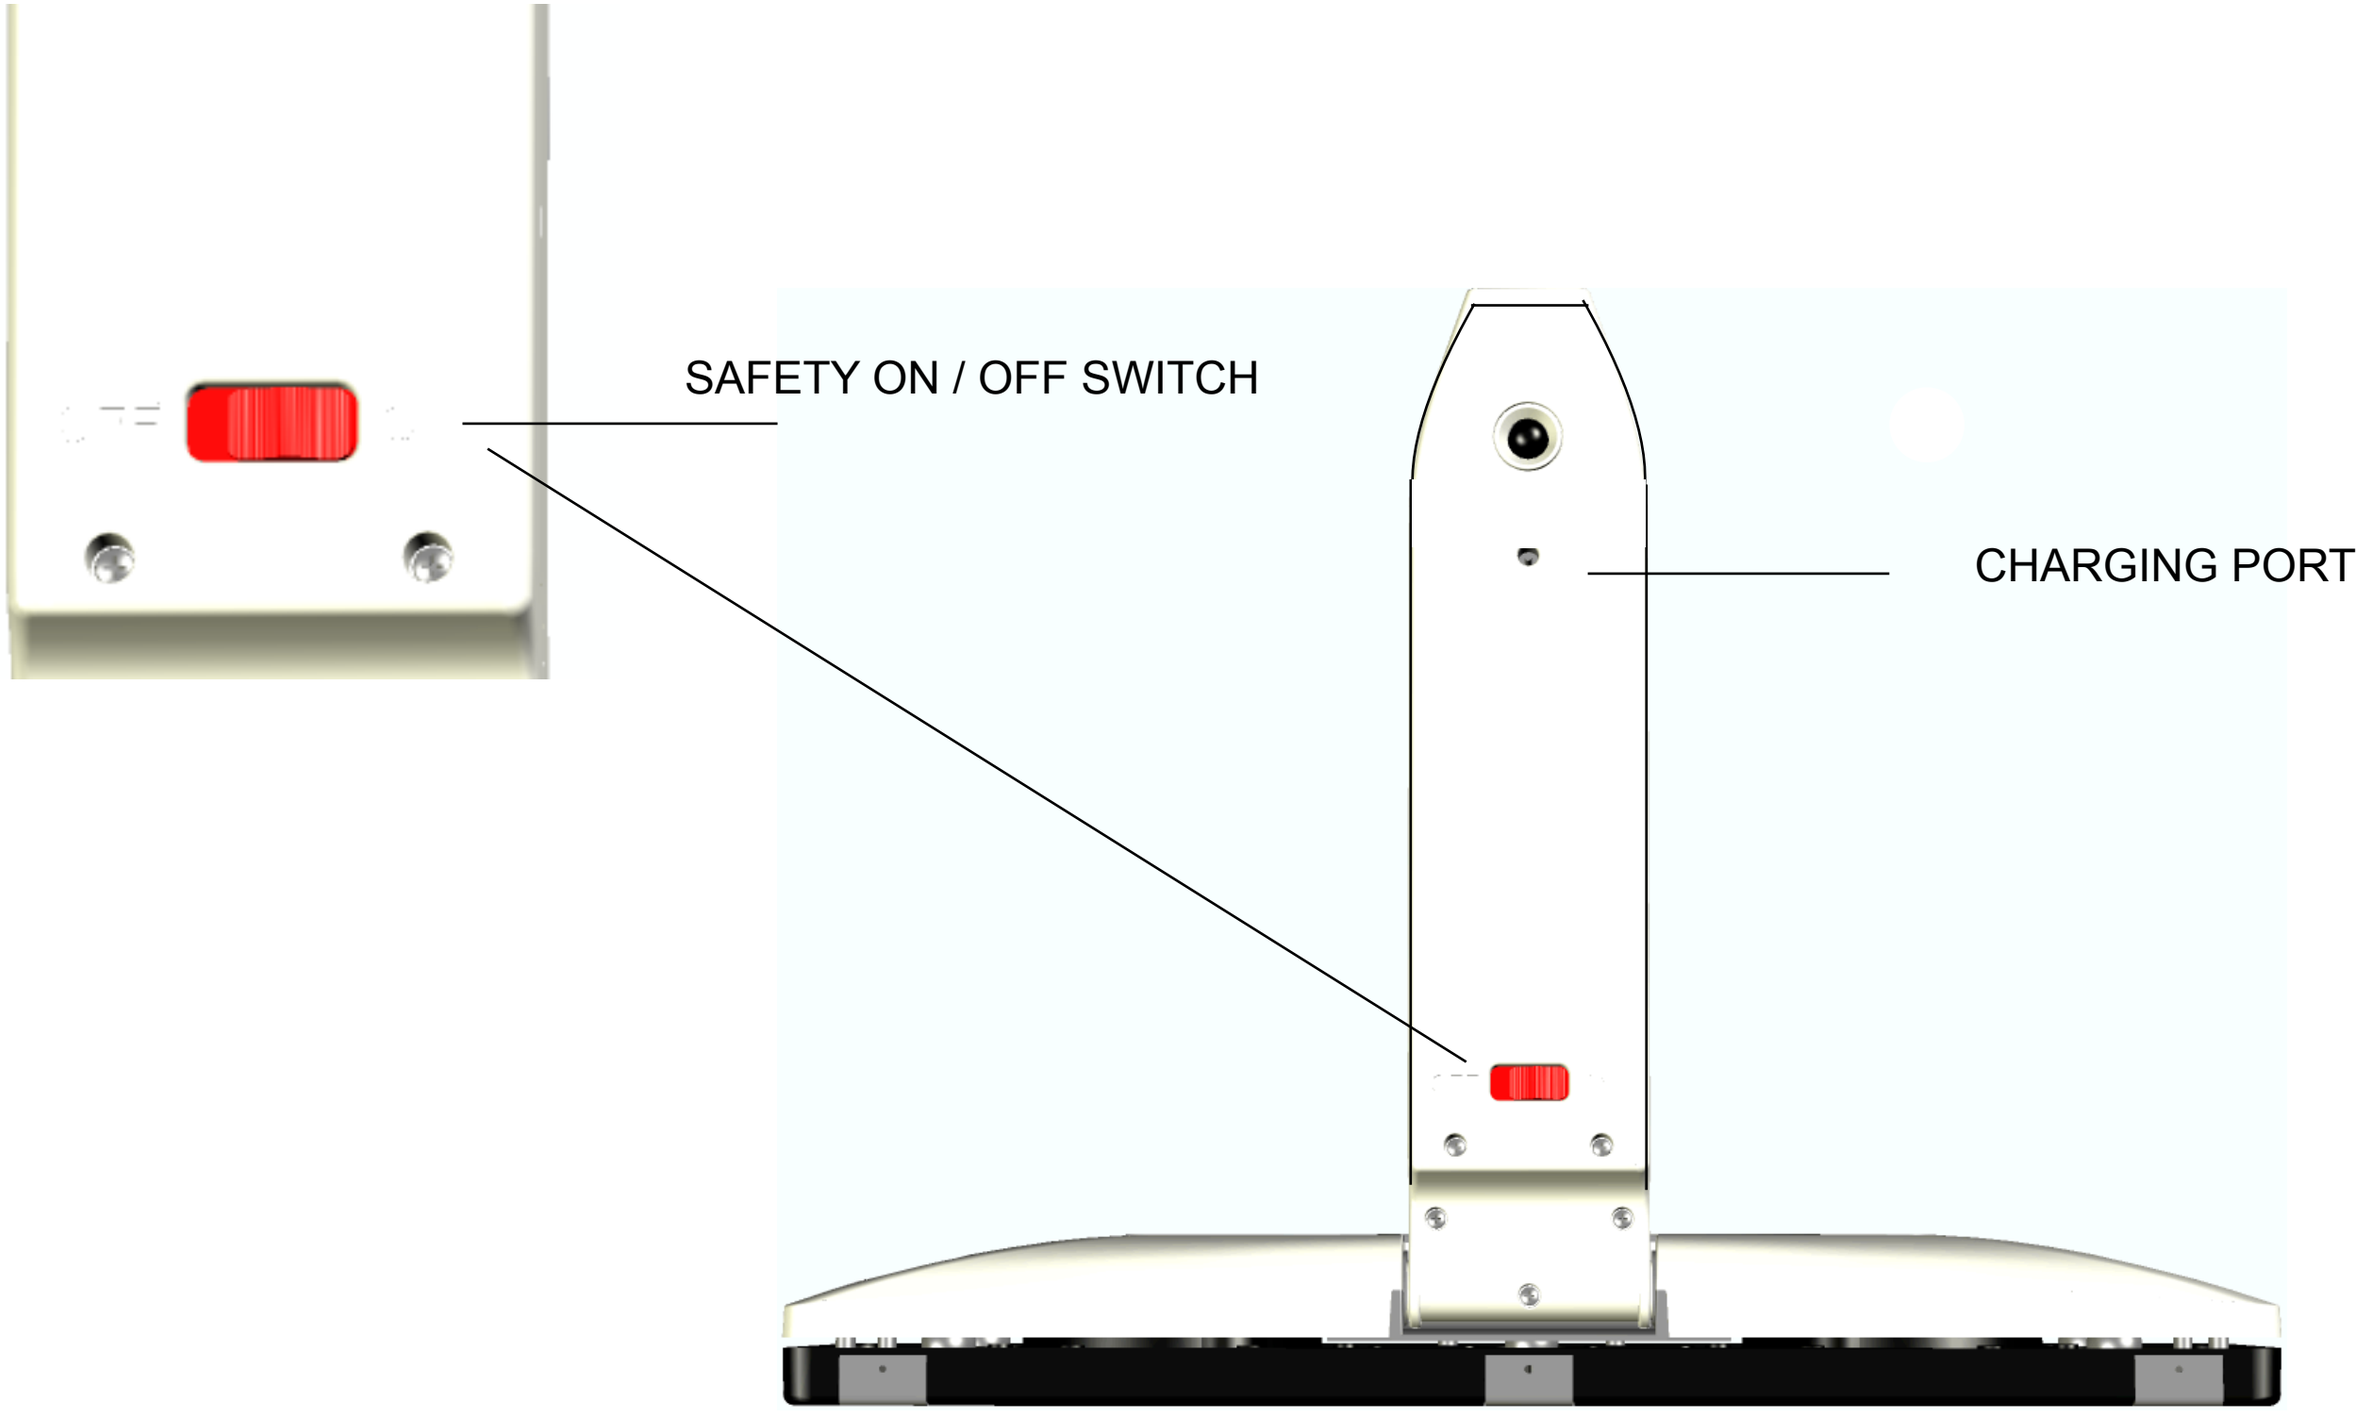


YMOP COMPONENTS

BOTTOM CLEANING PLATE:

VELCRO MOP-HEAD ATTACHMENT IS FEATURED ON THE BOTTOM OF THE PLATE

AND STRATEGICALLY PLACED ON ALL SIDES FOR “WRAP-AROUND” ADVANTAGE.

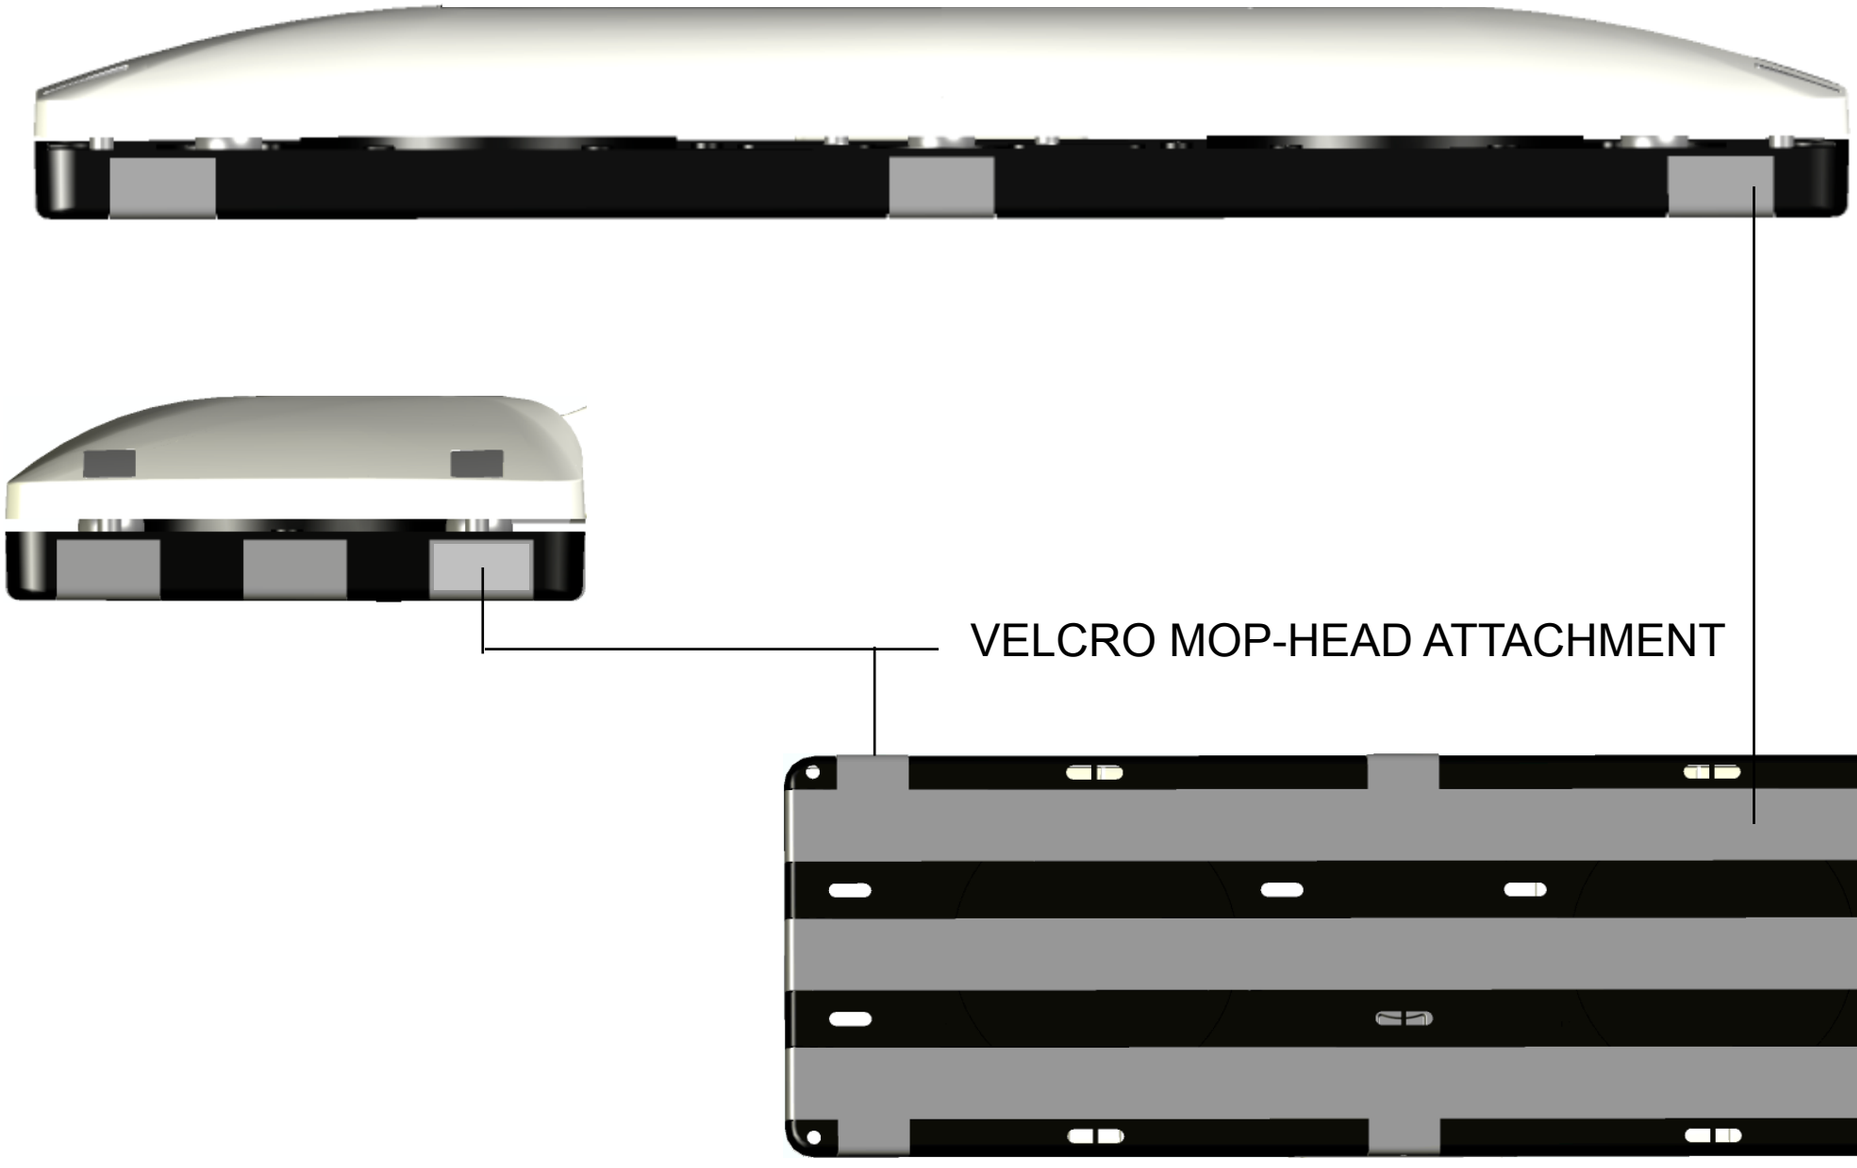


ACCESSORIES / OTHER CONTENT

DC CHARGER



SIDE-GRIP



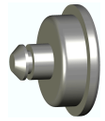

(END CAP)

WATER TRAY



MOP HEADS



YMOP ASSEMBLY



TUBE ASSEMBLY

1 INSERT SMALL TUBE INTO HANDLE-GRIP

(DEPRESS SPRING BALL INTO HOLE)






2 INSERT LARGE TUBE INTO BASE

(DEPRESS SPRING BALL INTO HOLE)



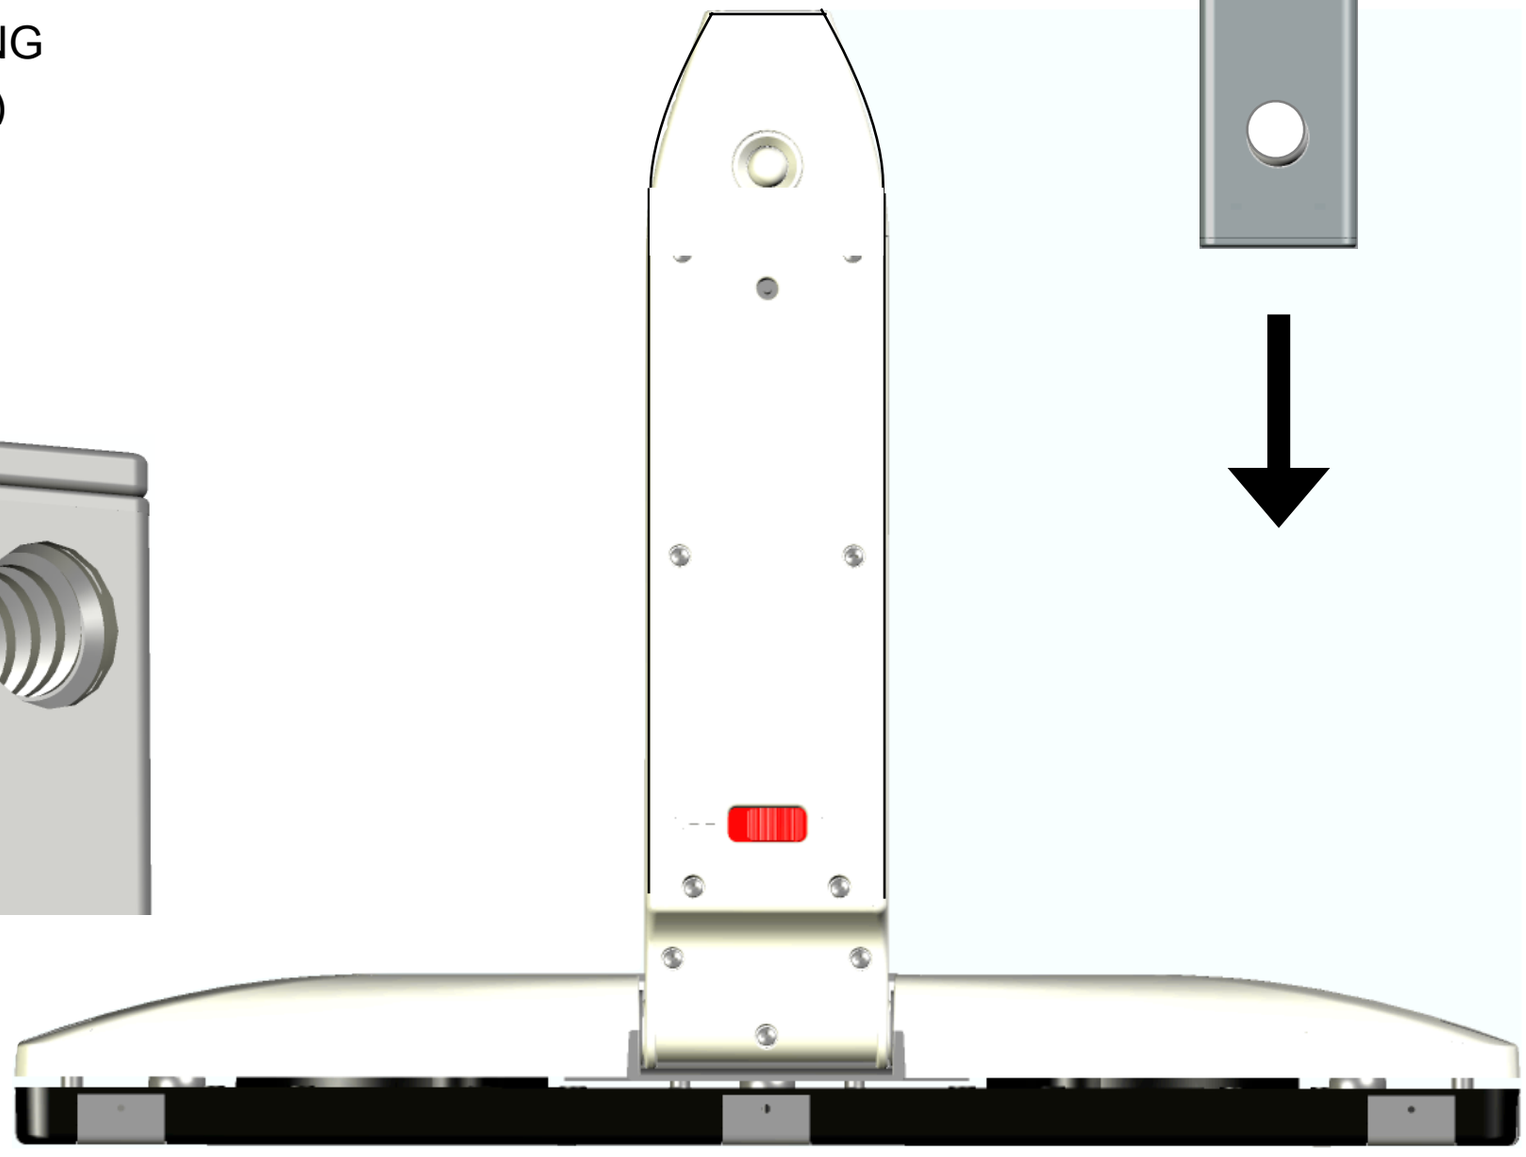


3 SIDE-GRIP

SCREW SIDE-GRIP INTO HANDLE

HOLE

(CHOOSE LEFT or RIGHT SIDE)

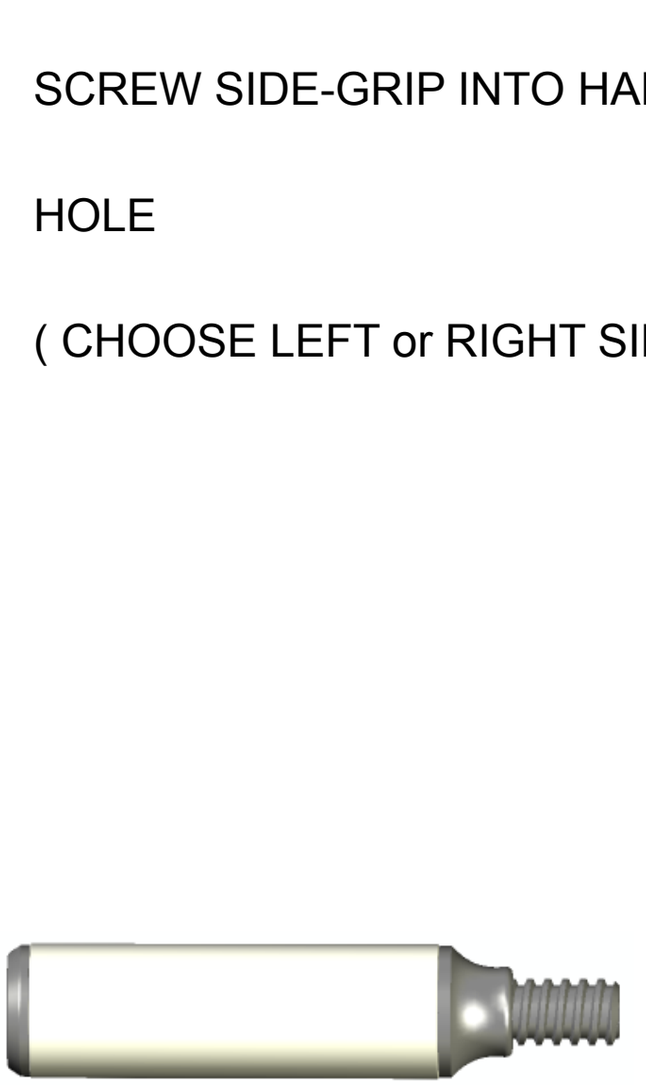



INSERT RUBBER PLUG / CAP

INTO OPPOSITE UNUSED HOLE




4

1 MOP-HEAD

ALWAYS ATTACH a MOP-HEAD to BOTTOM CLEANING PLATE before activating POWER BUTTON.

The YMop VELCRO ATTACHMENT allows you to have the added advantage of wrapping the MOP-HEAD around the CLEANING PLATE.

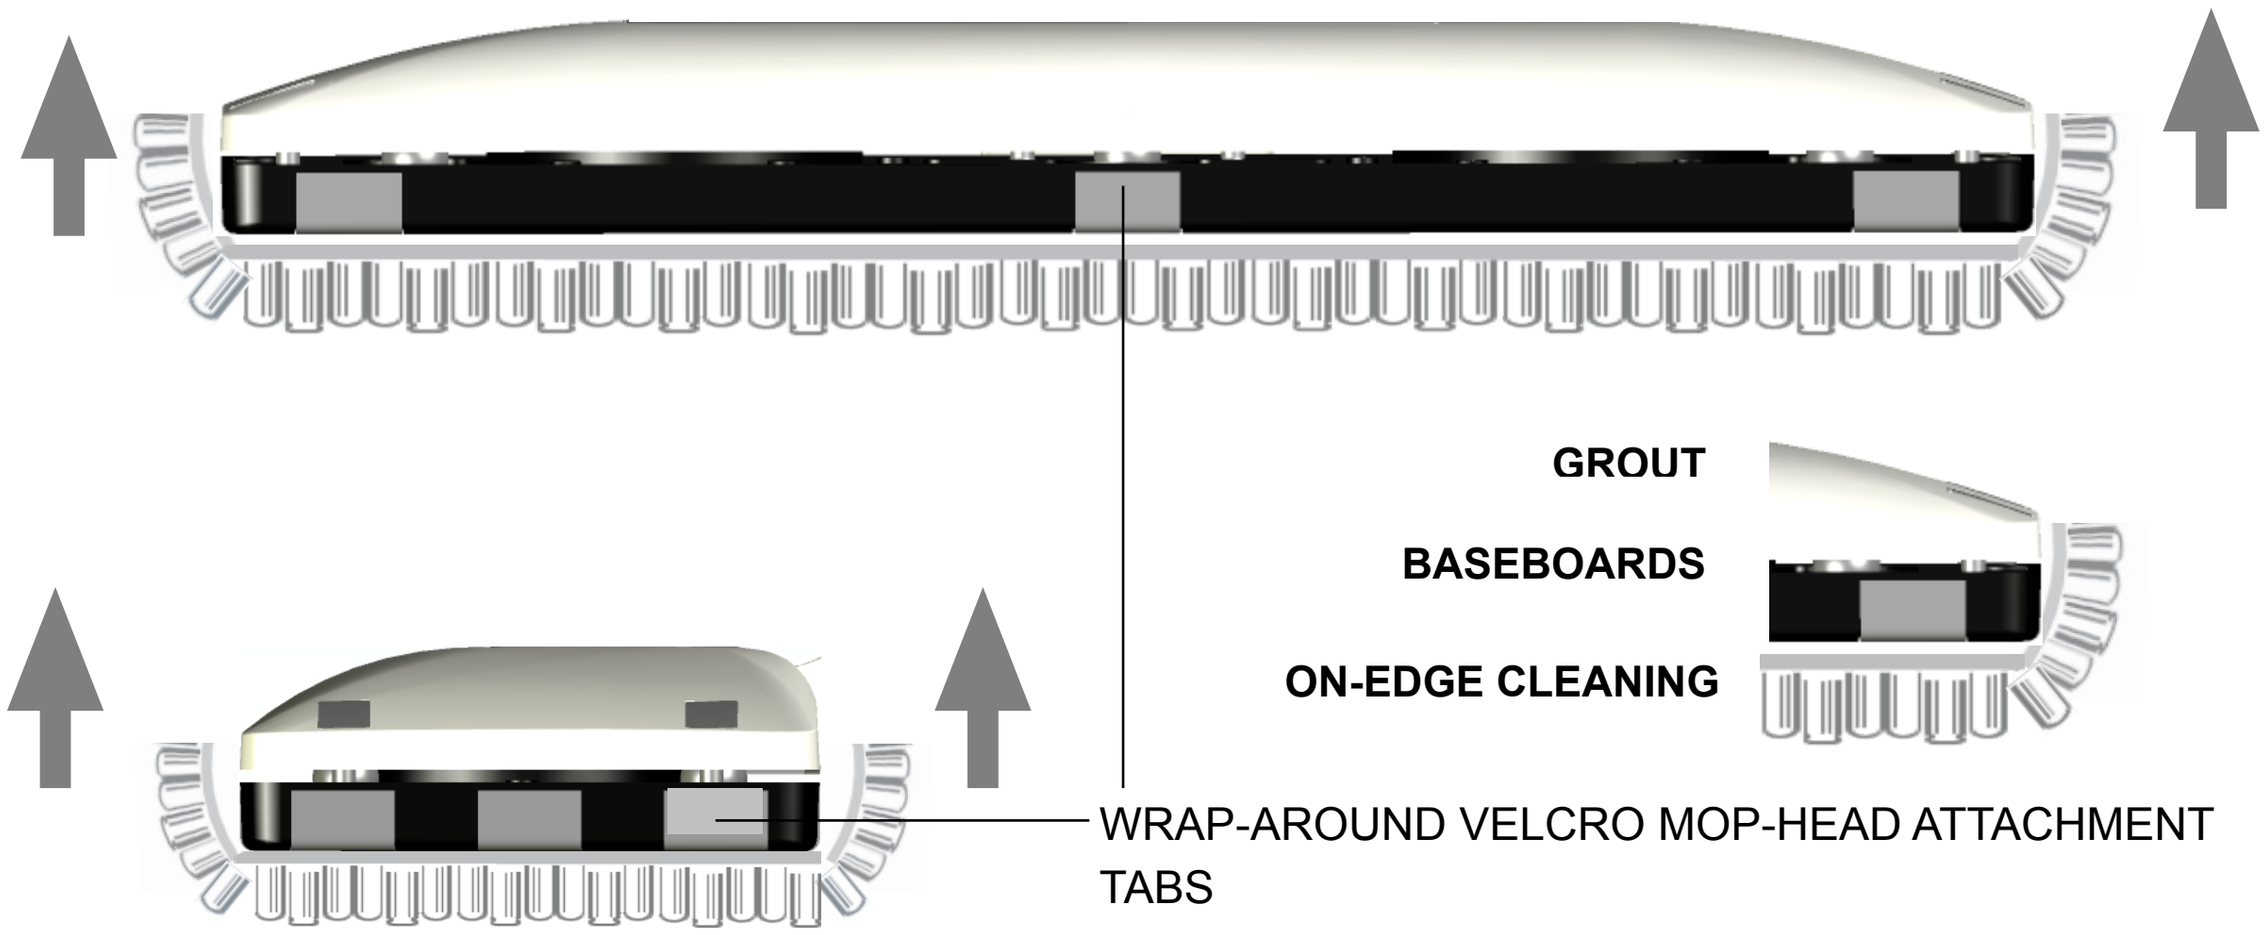

WIRELESS SWITCH BATTERY


2 On the REAR of the HANDLE-GRIP there is a BATTERY COMPARTMENT for the WIRELESS SWITCH.

Remove the COMPARTMENT COVER, insert BATTERY, replace COVER.

1) REMOVE COVER

2) INSERT BATTERY

3) REPLACE COVER

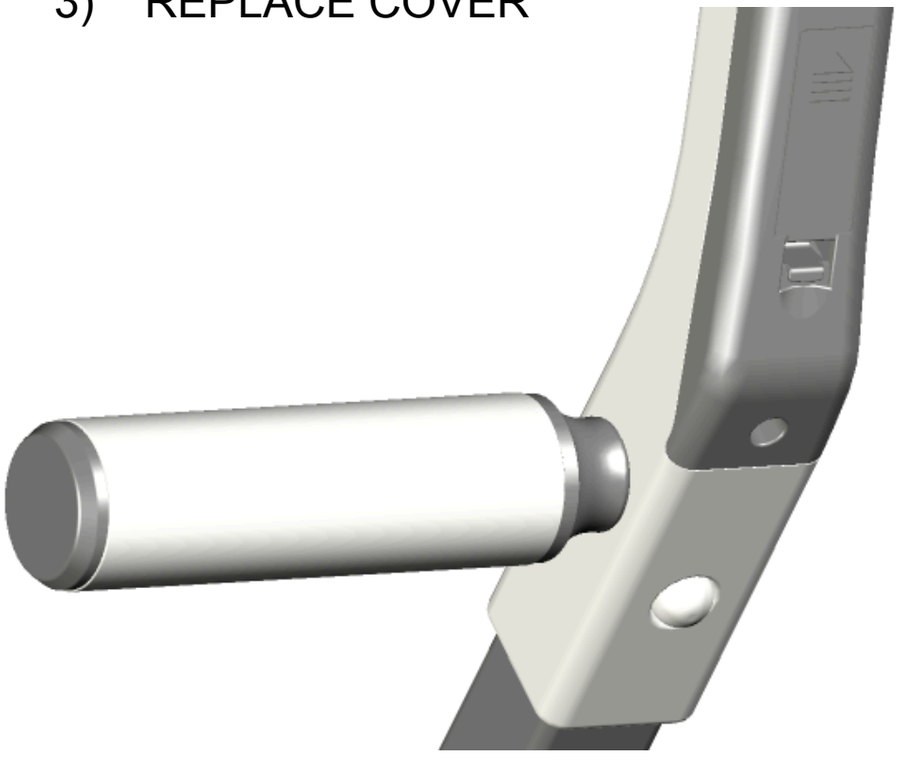






TUBE HEIGHT ADJUSTMENT

3

Adjust the HANDLE TUBE to your desired height with the TUBE HEIGHT ADJUSTMENT LOCK.

1) PULL LOCK LEVER OPEN

2) PUSH LOCK LEVER TIGHTLY INTO LOCK POSITION

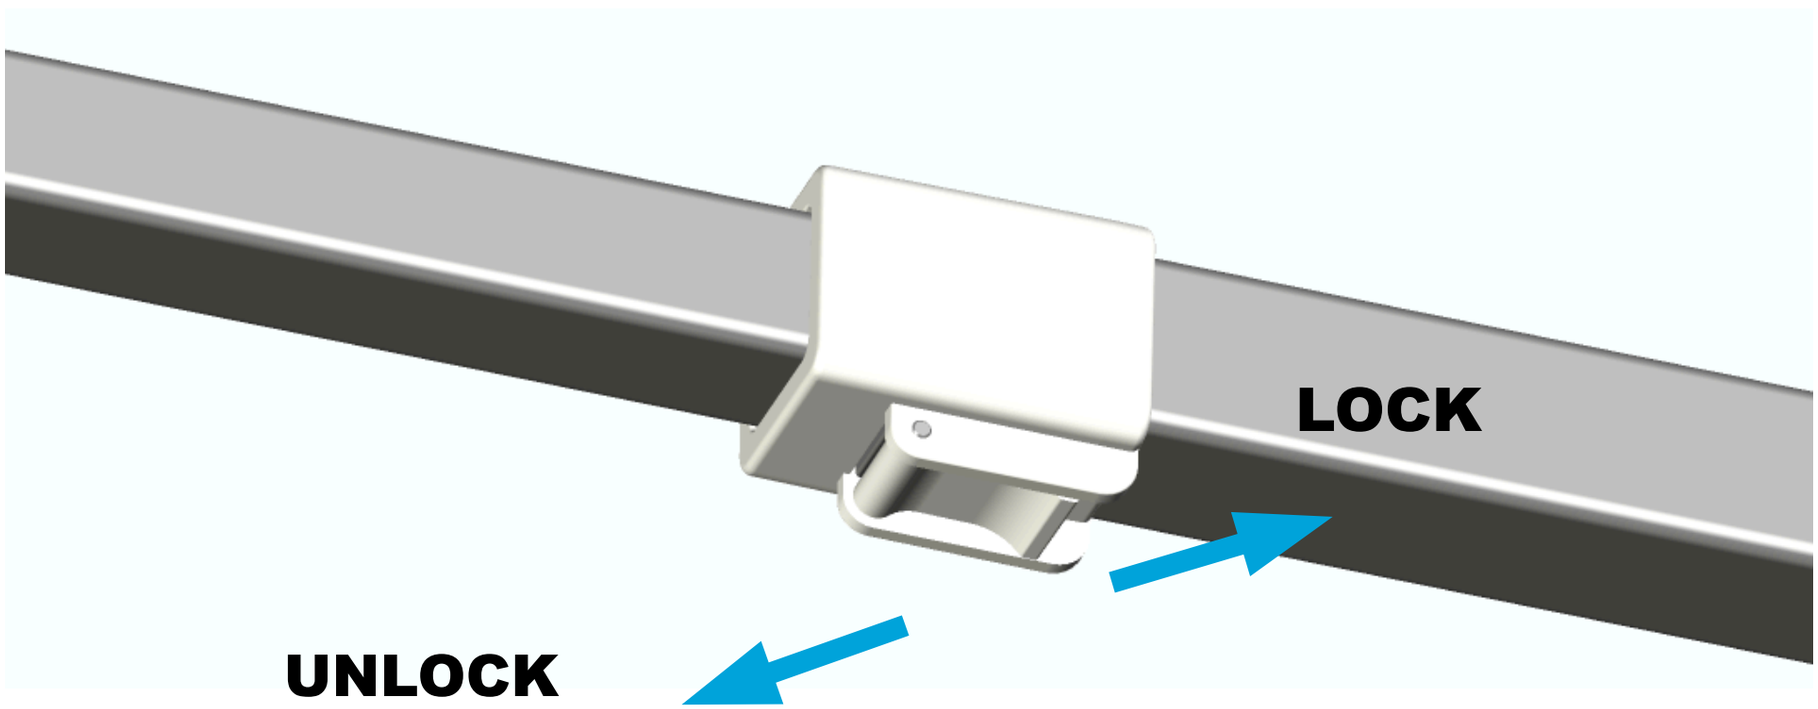


CHARGING THE BATTERY

Your Lithium BATTERY comes PRE-CHARGED with approximately 80 % of full capacity.

4 RE-CHARGE THE BATTERY:

1) CONNECT A/C WALL CONNECT TO POWER OUTPUT 110 / 220.

2) CONNECT the DC PLUG to the YMOP.

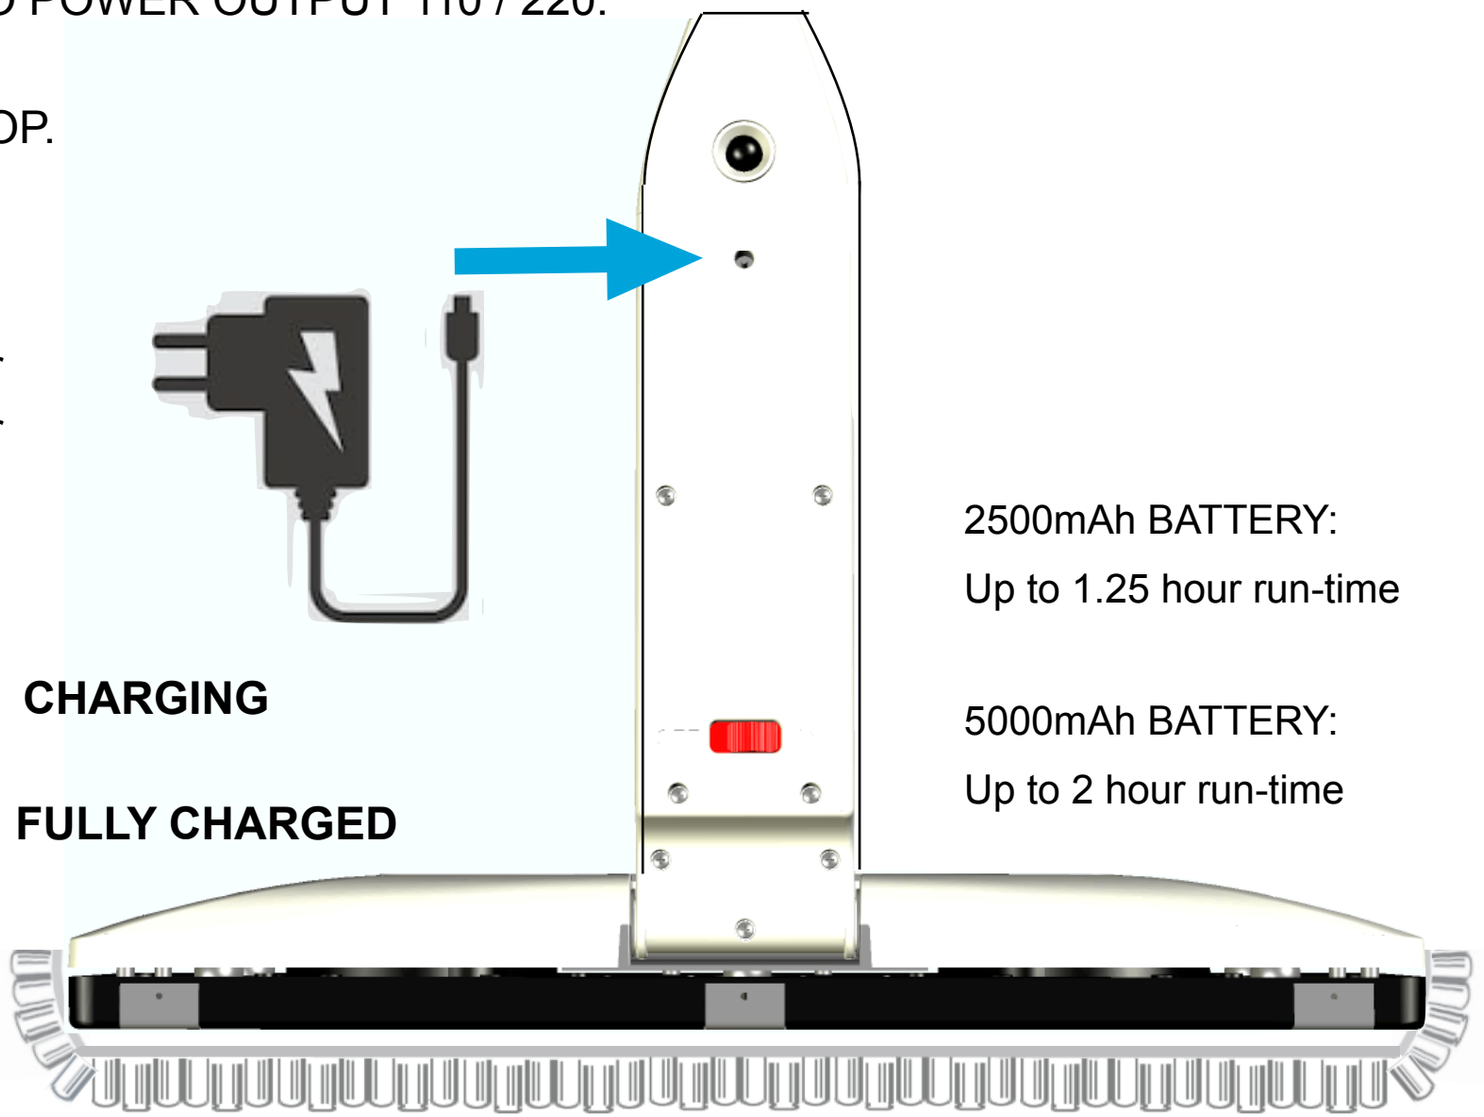

WARNING: Using a different charger than the one provided can damage your YMop and WILL VOID THE WARRANTY !

DC CHARGER SOLID **RED** LIGHT **= CHARGING**

DC CHARGER **SOLID** GREEN LIGHT **= FULLY CHARGED**

(full-charge requires 10 hours charging time)

2500mAh BATTERY:

Up to 1.25 hour run-time

5000mAh BATTERY:


Up to 2 hour run-time

SAFETY ON / OFF SWITCH

5 Your YMop comes equipped w/ a SAFETY ON / OFF SWITCH. Use this switch as an added child-deterrent, or when transporting, or storing your YMop for extended periods. The OFF POSITION should also be used whenever re-configuring the YMop unit—such as REMOVING / RE-INSERTING the SIDE-GRIP.

ON POSITION : ALLOWS the HAND-GRIP BUTTON to activate.

OFF POSITION: DISABLES ALL POWER.

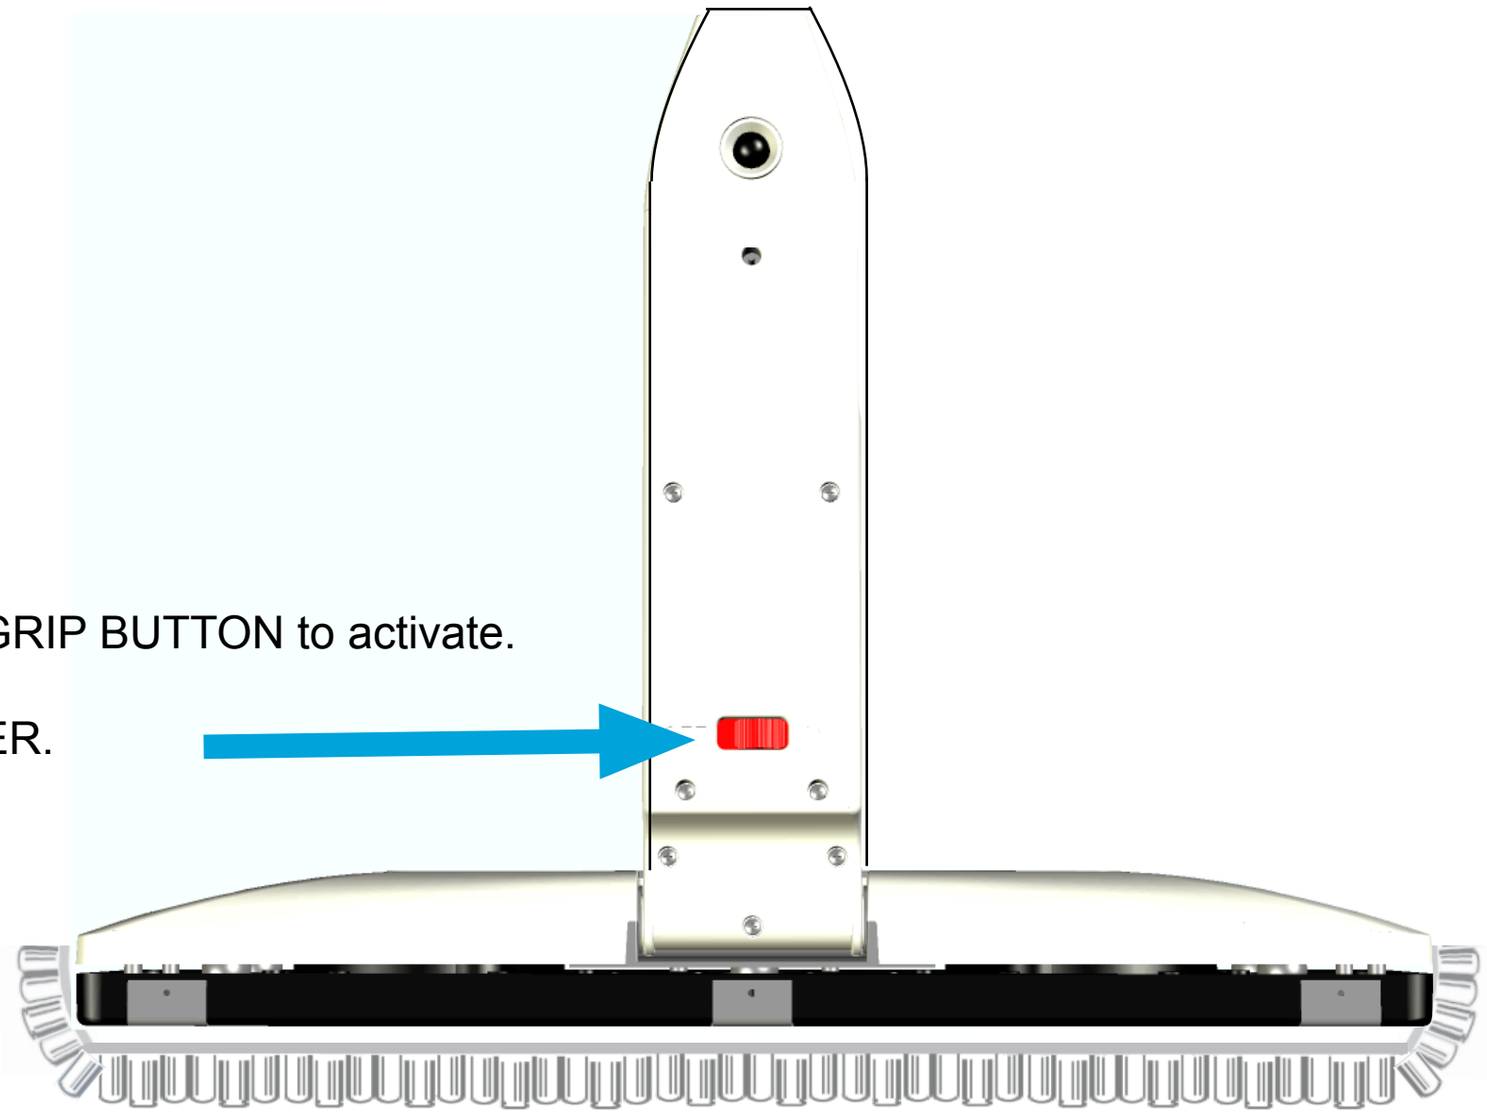

CLEANING SOLUTIONS

The YMop is designed to be used with any of your favorite cleaning solutions or any solution recommended by your carpet or hard-surface provider INCLUDING:

ALL PURPOSE FLOOR CLEANERS

ALERGY-FREE SOLUTIONS

SPECIALIZED WOOD CLEANERS

HEMP-BASED CLEANERS

ESSENTIAL OILS

WARNING: YMop DOES NOT IN ANY WAY endorse specific SPOT CLEANING AGENTS or Cleaning Agents in general. The use of ANY AGGRESSIVE CLEANING AGENT with / OR WITHOUT your YMop may cause serious irreversible damage to floors, carpets, or rugs. ALWAYS use the utmost level of caution when using aggressive cleaners, follow the manufacturers instructions, and ALWAYS TEST FIRST in an inconspicuous area where damage will be unnoticeable.

HOW TO USE WATER / CLEANING SOLUTION

The YMop is a TANKLESS SYSTEM. It has NO WATER TANKS to fill or empty. The MOP-HEADS are designed to hold all of the WATER / CLEANING SOLUTION. Your 4000 RPM YMop has the power to drive a fully-loaded MOP-HEAD (up to 17 ounces) with ease.


You will never need to clean the machine and there are no sprayer components to clog or break.

3 EASY WAYS TO USE WATER / SOLUTION

There are 3 basic ways you can add WATER / SOLUTION to the MOP-HEADS:





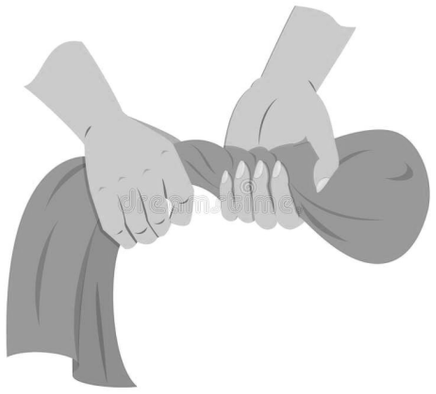

HOW TO ADD WATER / CLEANING SOLUTION


METHOD 1) WATER TRAY


- INSERT YMOP
- POWER BUTTON ON
- ABSORB WATER

- REMOVE FROM TRAY
- BEGIN CLEANING

POUR WATER / CLEANING SOLUTION INTO TRAY



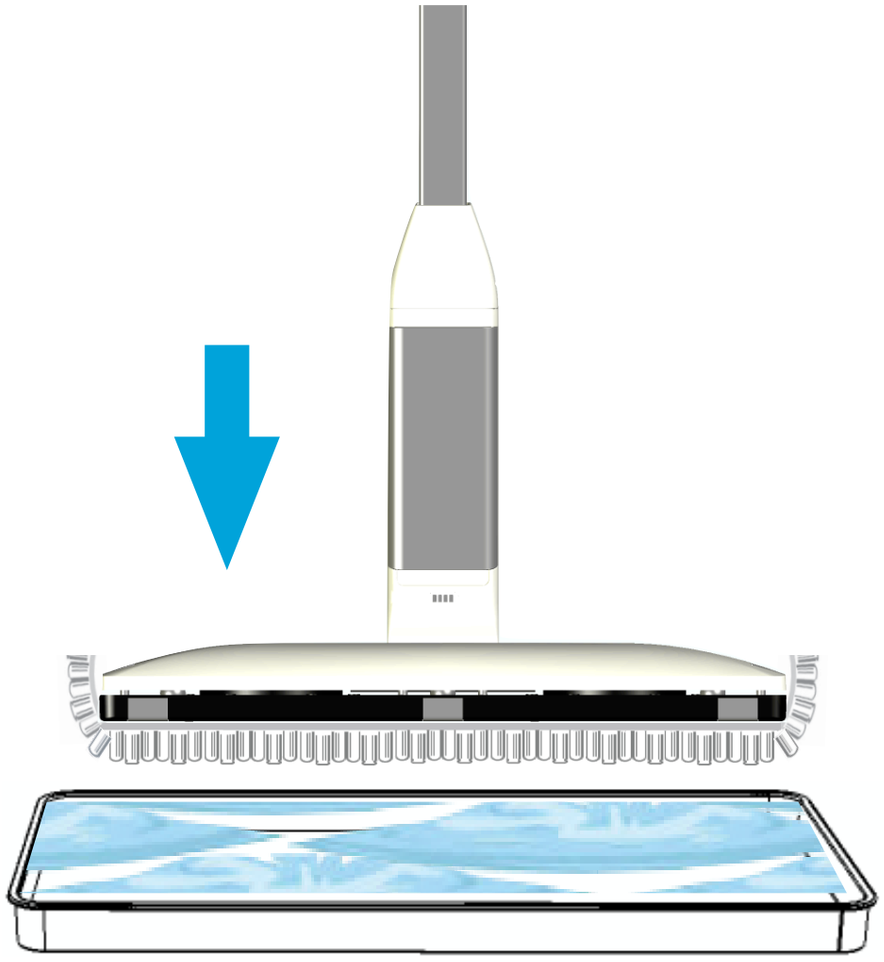

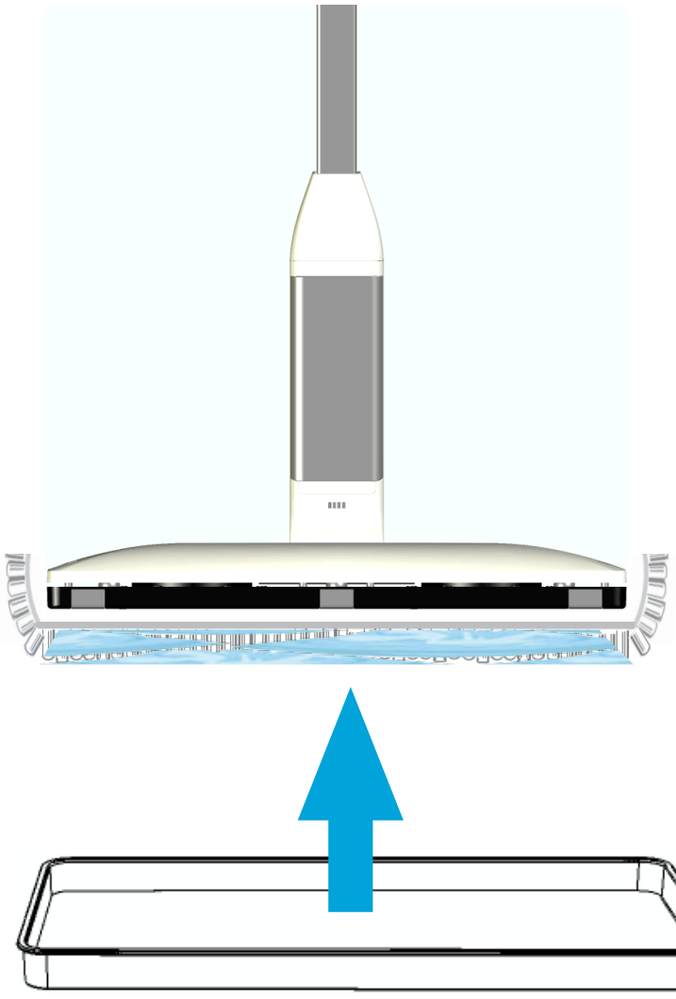



NOTE: The WATER TRAY is for CLEAN WATER & CLEAN MOP-HEADS ONLY. NEVER dip SOILED MOP-HEADS into the TRAY. If you want to ADD MORE WATER to a SOILED MOP-HEAD use METHOD 2 or 3.

PLACE TRAY ON FLOOR ONLY !

Using raised surfaces—like a TABLE—will make emptying unused water / solution awkward and dangerous:

DON’T DO THIS !

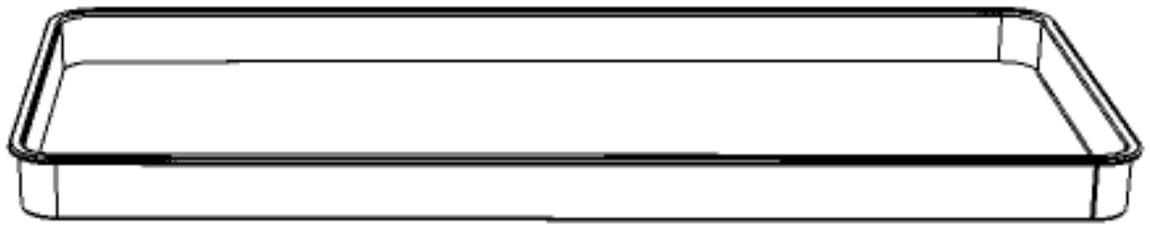

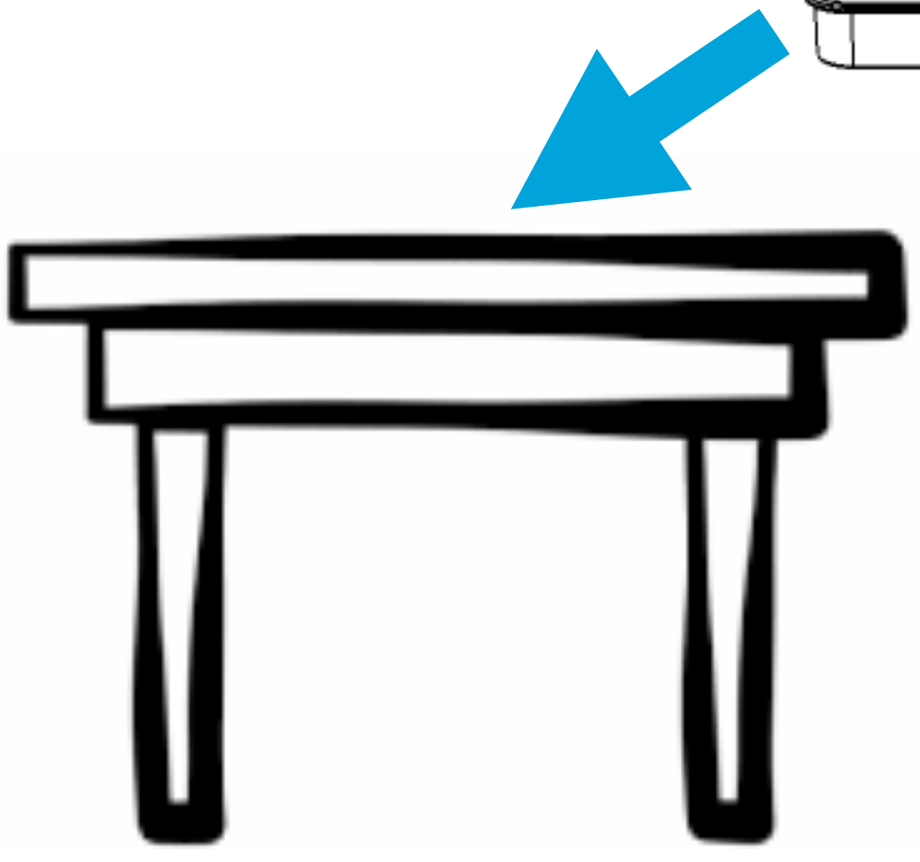


HOW MUCH WATER / SOLUTION ?

When deciding how much WATER / SOLUTION to use, keep in mind that your YMop will accelerate the cleaning power of your cleaning solutions, so try using as little as possible. With this in mind:

HARD SURFACES:	8 oz - 12 oz	250ml - 350ml
CARPETS / RUGS:	12 oz - 20 oz	350ml - 600ml

This will vary according to your specific surfaces and to what degree they have accumulated dirt. General Rule: If you are experiencing left-over streaks / water marks you are probably using too much fluid.

HOW MUCH ?

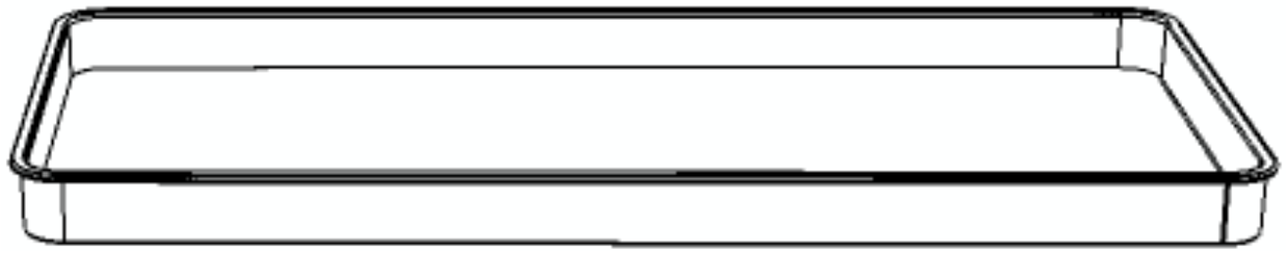

METHOD 2) SPRAY BOTTLE

Many of your favorite or recommended cleaning solutions come in SPRAY BOTTLE form. Your 4000 RPM YMop will accelerate all of these CLEANERS so that you can save money by using less.



METHOD 3) WRING-OUT METHOD

For those HARD CORE cleaning fanatics that insist on a hands-on method, GO FOR IT ! Although some users are not comfortable with this method, those that ARE have the added advantage of organically FINE-TUNING the exact water amounts using this age-old manual method.



NOTE: ALWAYS USE PROTECTIVE GLOVES WHEN USING THIS METHOD !




STEERING THE YMOP / FORWARD-DRIVE ASSIST

It’s better to think of the YMop Handle as more of a STEERING SYSTEM than a push-pull HANDLE.


Your YMop has FORWARD-DRIVE ASSIST and you should allow the YMop to do as much of the work as possible. The YMop has a calibrated vibration (cYmatic Frequency) which maximizes its ability to absorb moisture / dirt.

NOTE: HOLDING the HANDLE in the LOWEST POSSIBLE POSITION allows your YMOP to activate it’s fullest FORWARD-DRIVE capabilities.

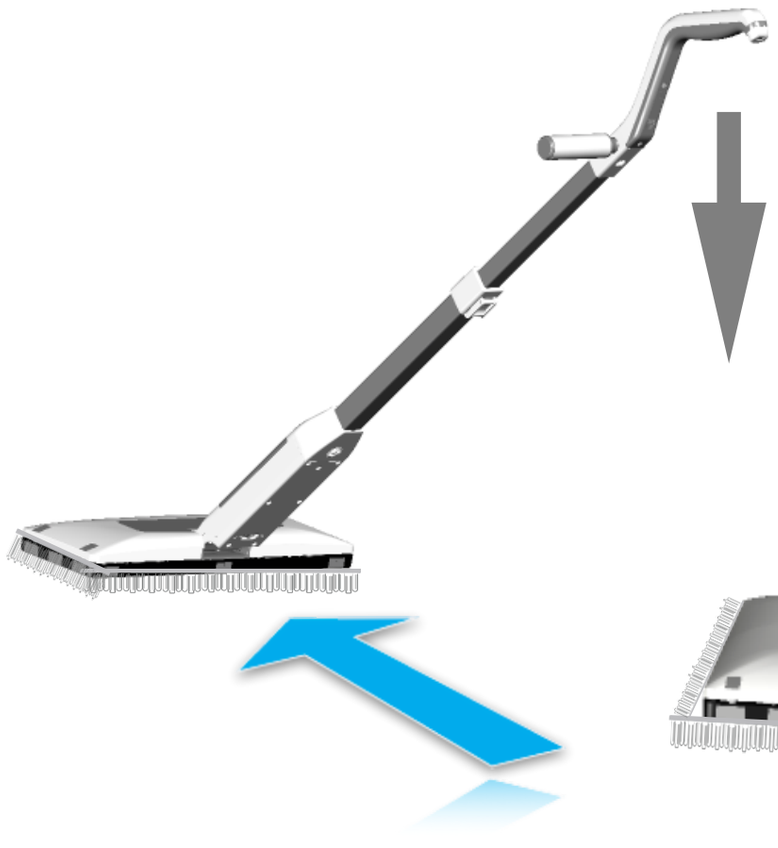

NOTE:

LOWERING THE HANDLE . . .

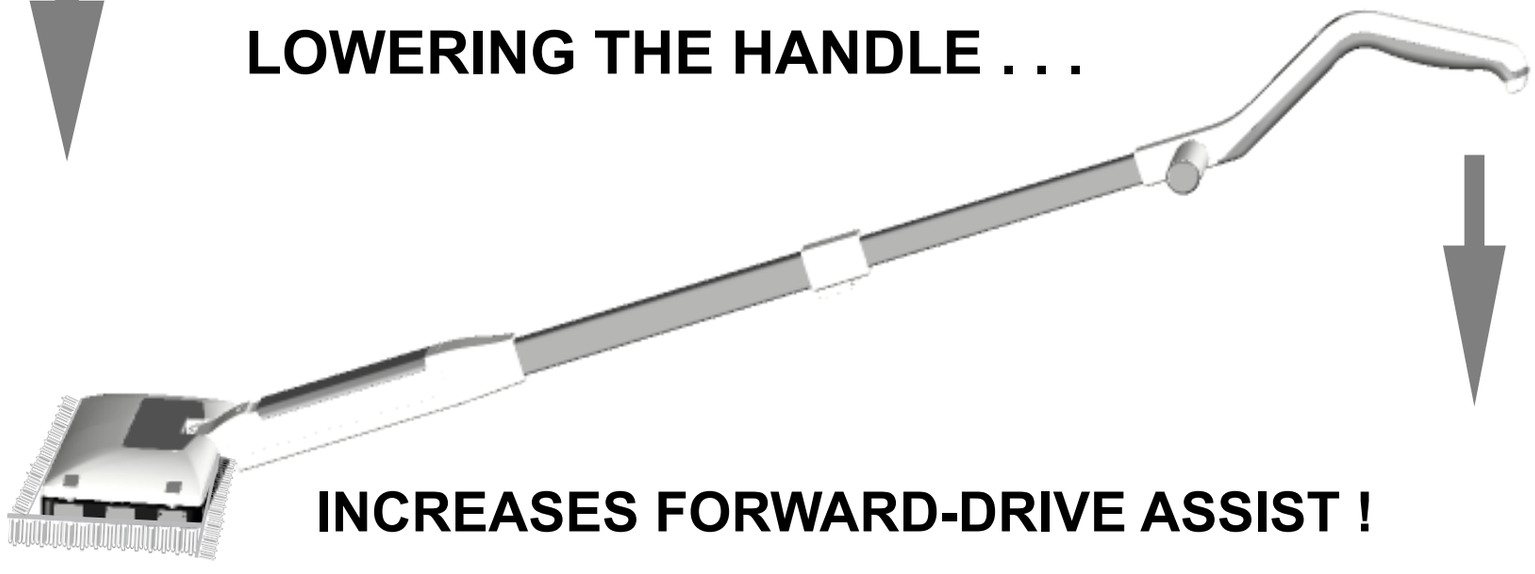


INCREASES FORWARD-DRIVE ASSIST !


STEERING THE YMOP / THE ‘ BOOST TECHNIQUE ’

ANOTHER WAY TO INCREASE FORWARD-DRIVE ASSIST PERFORMANCE:


Your YMop, MOP-HEADS are so amazingly dense, the CHENILLE MICROFIBER NOODLES can actually help increase FORWARD-DRIVE ASSIST performance. Try gently BOOSTING the very back of the HAND-GRIP FORWARD with **1 QUICK BOOST** so that the MICROFIBER NOODLES are ratcheted forward. Tug for REVERSE-ASSIST.

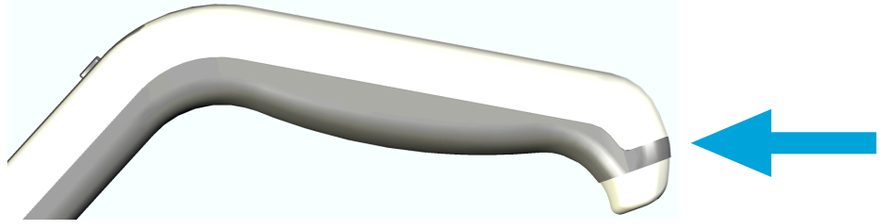


QUICK SOLID
PUSH HERE

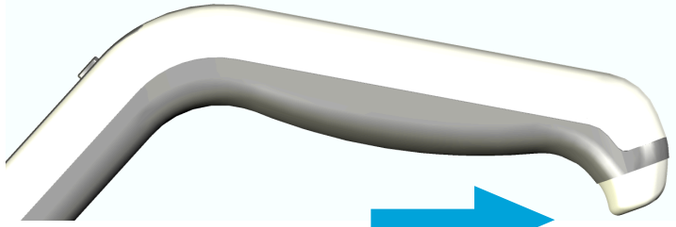

QUICK SOLID
PULL HERE

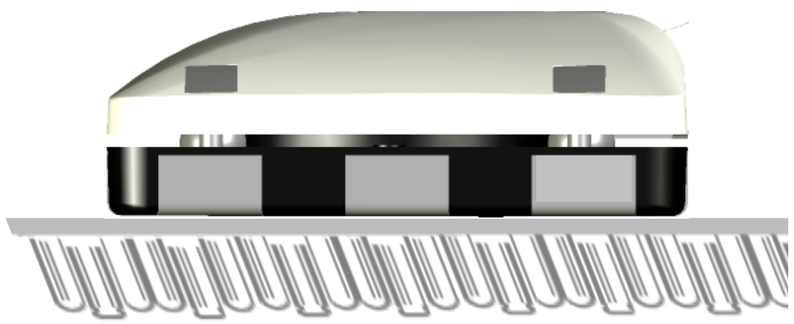

BETTER FORWARD-ASSIST

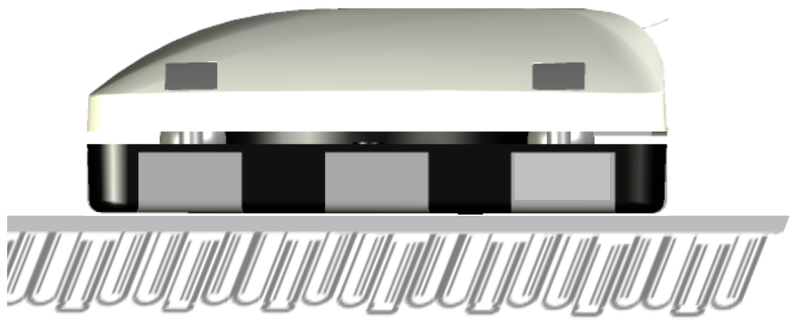

REVERSE -ASSIST


CARPETS / RUGS

Your YMop, w/ *FORWARD-DRIVE ASSIST,* will move faster or slower based on the density of the cleaning surface. Carpets and Rugs are a prime example: a denser carpet will require more time to extract embedded dirt. Ideally, you should allow your YMop to move at its own pace so that it can do its best possible work.


HOW YOUR YMOP SPOT CLEANS YOUR ENTIRE CARPET OR RUG

On carpets or rugs, realize that your YMop is doing very much the same process as blotting a spot or spill with a cotton (or similar) cloth. LONG SCRUBBING ACTIONS are DANGEROUS and can cause damage to carpet fibers. YMop's SHORT BLOTTING ACTIONS are a safe and effective way to remove spots and spills as well as general dirt. Your YMop is HIGH-SPEED BLOTTING at 4000 RPM with SAFE SHORT-ACTION BLOTTING so the slower you move over an area, the more thoroughly you are cleaning.

Scrubs & Blots

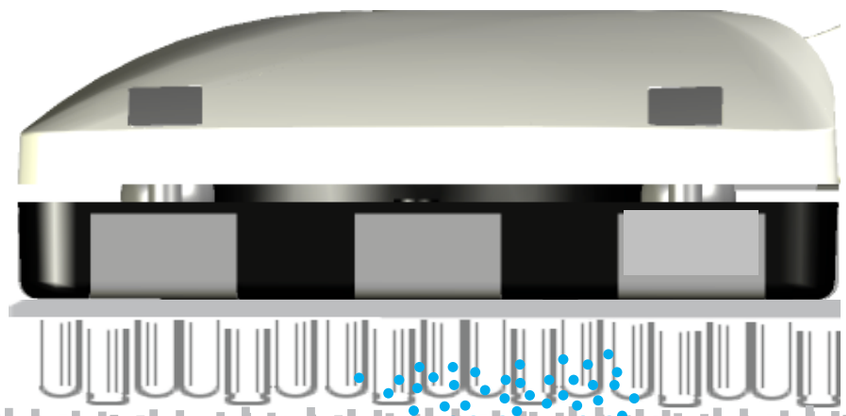


Cymatic Cleaning™ utilizes frequency to maximize absorption.

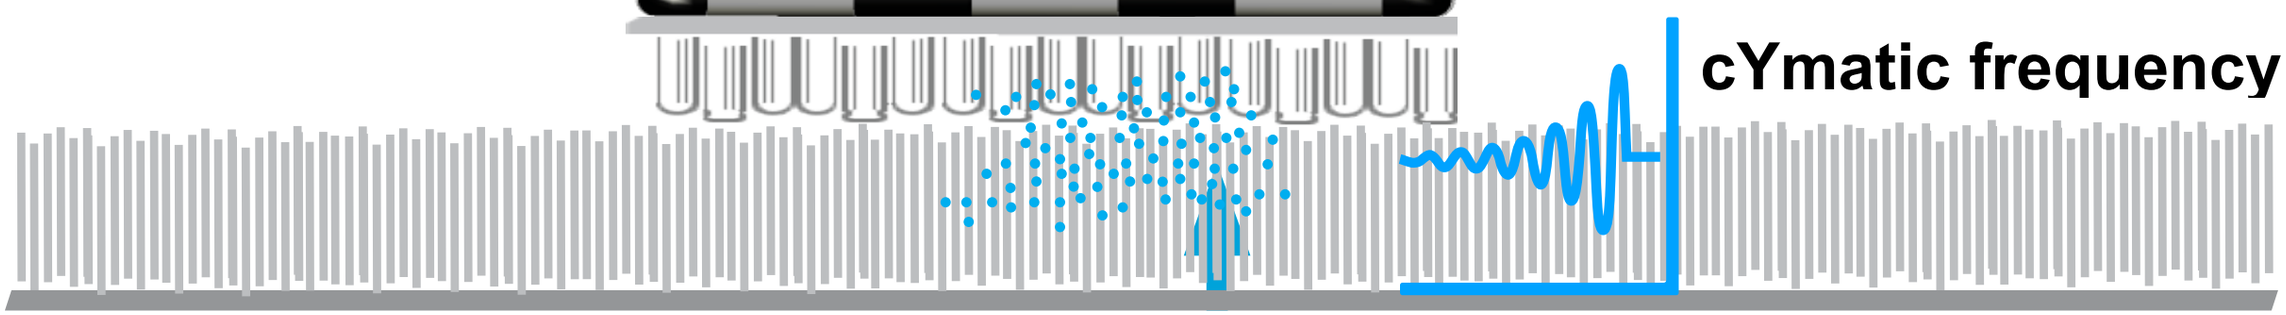

CARPETS & RUGS

DIRECTIONAL NAPS:

Many CARPETS & RUGS have a DIRECTIONAL NAP which means that the fibers were woven by-hand or by-machine in a specific direction / leaning to ONE SIDE. It is best to steer your YMop in the DIRECTION of the NAP. This will cause the CARPET / RUG FIBERS to grab, rather than resist the MICROFIBER MOP-HEAD DRIVE ACTION.

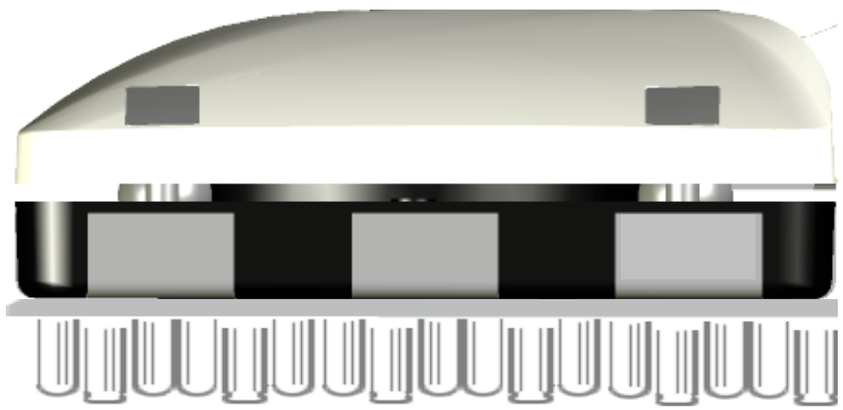

YES




NO



CARPETS / RUGS

HOW TO DETERMINE the DIRECTION of a CARPET / RUG NAP:


An easy way to determine the NAP DIRECTION is to simply turn your YMop in a variety of cross-directions and feel which way seems to be the easiest to push. Keep in mind that some naps are neutral and will feel relatively the same in any direction.

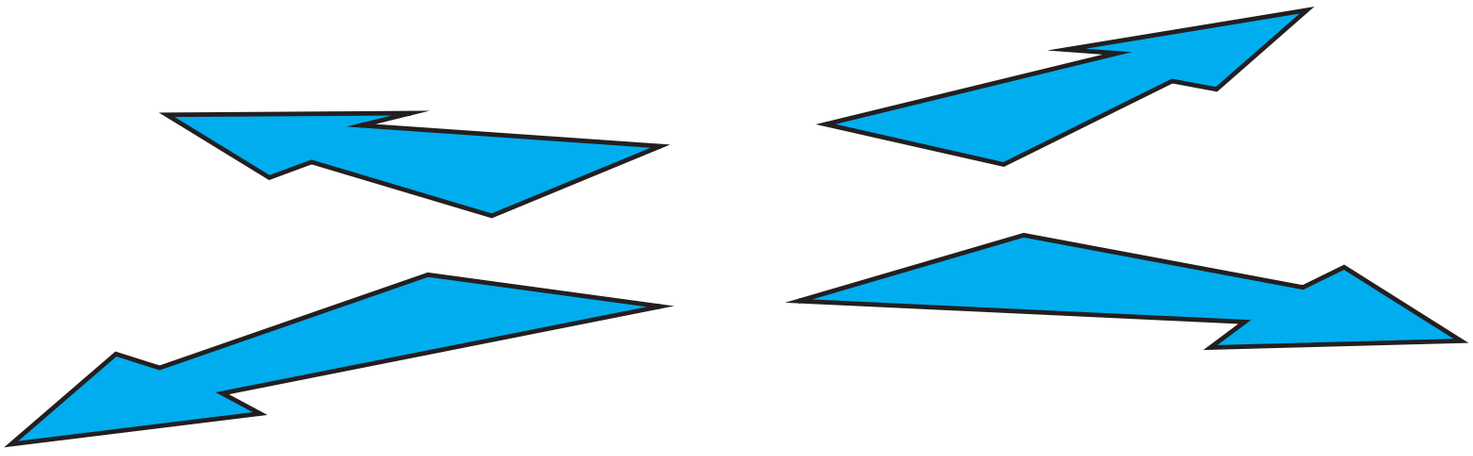

CARPETS / RUGS

DIRECTIONAL NAPS:

Ideally, you should use your “BOOST TECHNIQUE” to maximize FORWARD-DRIVE ACTION.

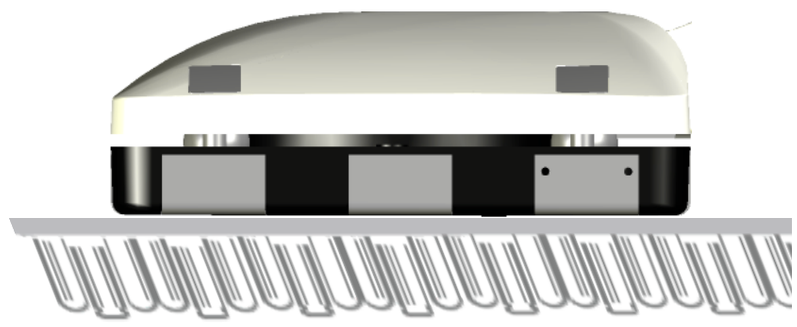

YES

BEST FORWARD-ASSIST




NO




USING THE SIDE-GRIP

Your YMop comes with an ON-EDGE POWER CLEANING SIDE-GRIP.

Use the SIDE-GRIP to add extra pressure on **tough spots**, **scuffs** or **grout lines**.

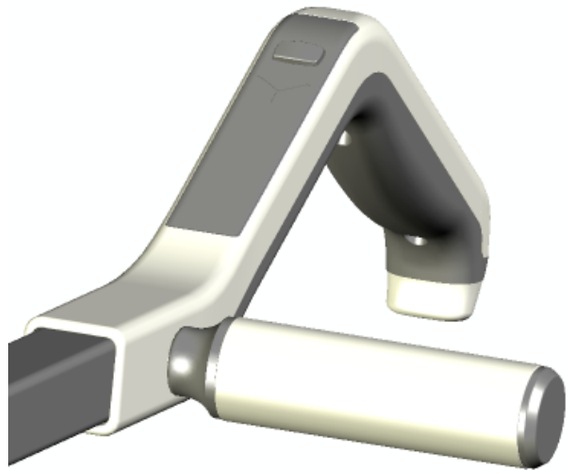

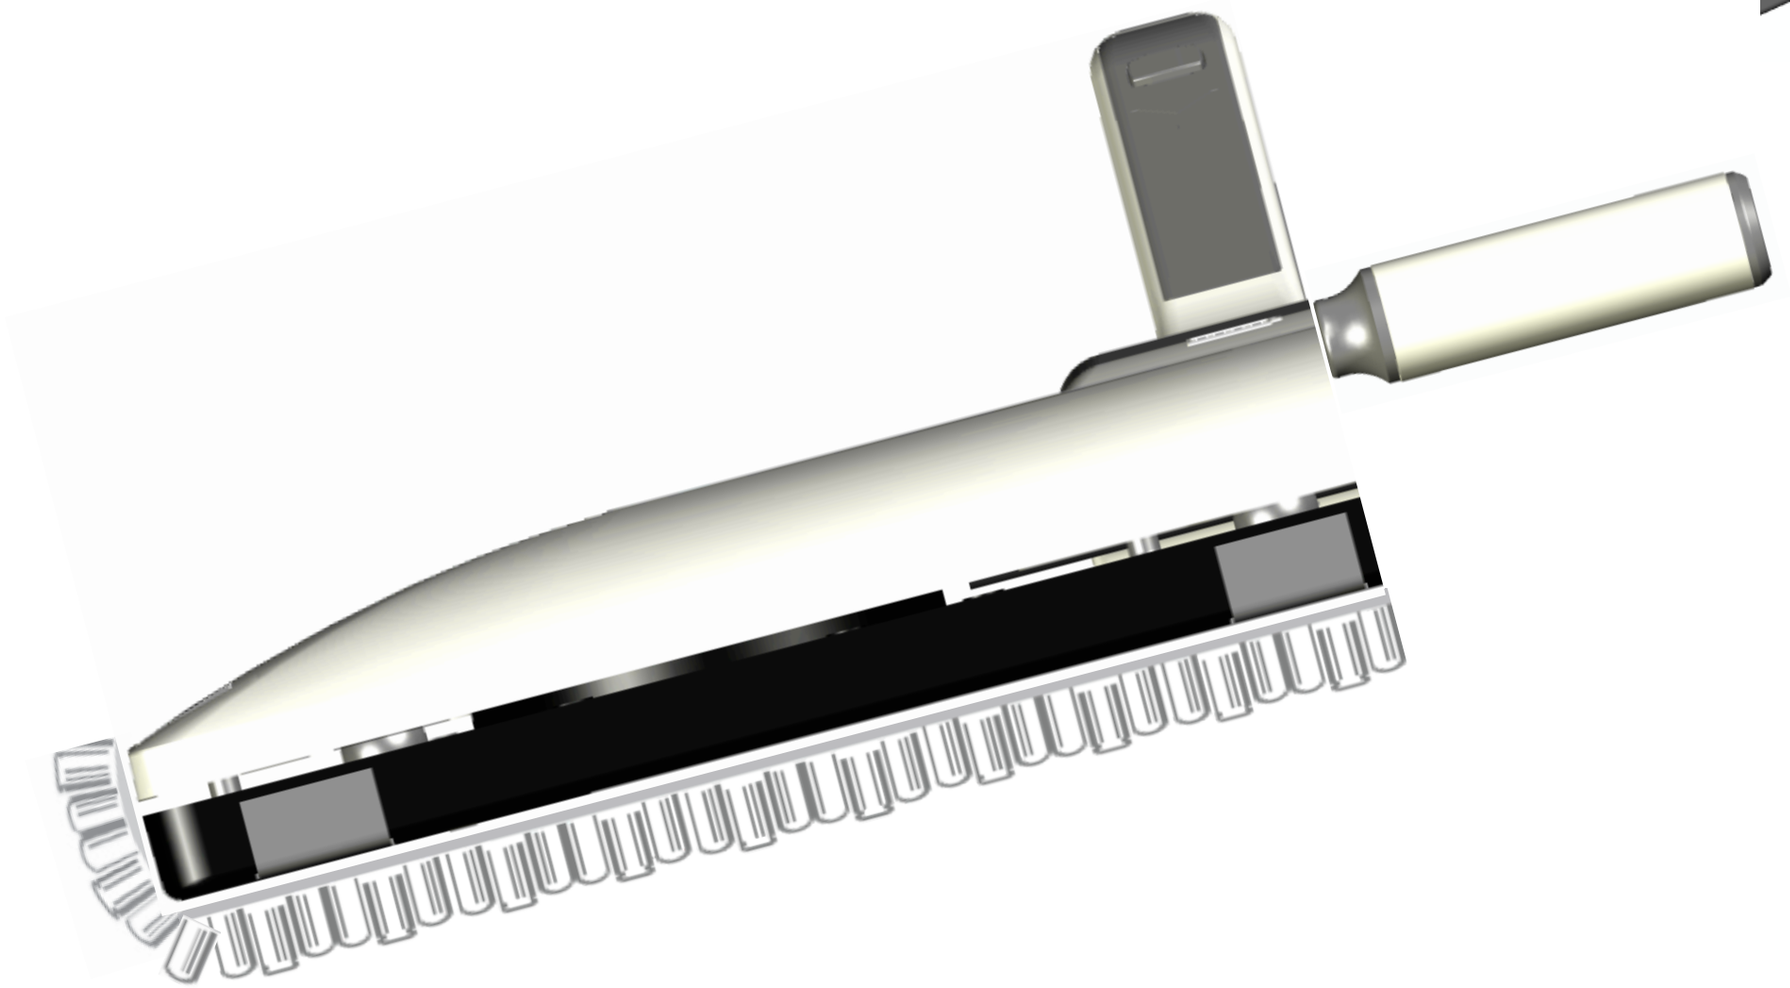



MOP-HEAD WASHING / DRYING

WASHING: WASHING MACHINE / HIGH-HEAT **(NO BLEACH, NO FABRIC SOFTENER)**

DRYING: DRYING MACHINE / LOW-HEAT (**LOW-HEAT ONLY, OR AIR DRY SETTING)**

WARNING: BLEACH, FABRIC SOFTENER, AND/OR DRYING AT HIGH-HEAT WILL CAUSE PERMANENT DAMAGE TO YOUR MICROFIBER MOP HEADS !!!

TO EXTEND THE LIFE OF YOUR MOP-HEADS, WASH REGULARLY / IMMEDIATELY AFTER USE.

1ST TIME DEEP-CLEANING RESULTS:

It's normal for MOP-HEADS to become heavily soiled quickly on first time use. Your YMop can remove deeply embedded soil that other methods failed to remove.

GENERAL / MAINTENANCE CLEANING RESULTS:

Subsequent regular cleanings of your carpets and/or hard floors will require less and less time and effort, thus you will notice that MOP-HEADS will not soil as heavily.

WASH REGULARLY !

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
NO POWER.	Safety Switch is powered OFF.	POWER-ON SAFETY SWITCH
STILL NO POWER.	Primary Battery needs recharging.	RECHARGE BATTERY
STILL NO POWER.	Wireless Battery needs replacing.	REPLACE WIRELESS BATTERY
STILL NO POWER	Defective / worn-out BATTERY or SWITCH.	Contact YMop Lab for servicing.
NO FORWARD-DRIVE ASSIST	Mop-Head fibers are reversed.	USE BOOST TECHNIQUE
STILL NO FORWARD DRIVE ASSIST	Mop-Head fibers pattern is irregular.	Rotate MOP-HEAD /FRONT TO BACK

IMPORTANT SAFETY INSTRUCTIONS

SAFETY SWITCH

Turn off the SAFETY SWITCH when removing the SIDE-GRIP, clearing the BOTTOM PLATE of jams, wiping-down your YMop, transporting, or storing your YMop for long periods. Such preventive safety measures reduce the risk of starting your YMop accidentally.

BATTERY SAFETY

Follow all charging instructions. Charge the YMop on-board battery only in temperatures between 32F and 112F. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire. Do not store your YMop where temperatures will exceed 95F.

The EPA certified RBRC Battery Recycling Seal on the Lithium Ion battery indicates that YMop Industrial is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Lithium Ion batteries into the trash or the municipal waste stream, which may be illegal in your area. Please visit www.rbrc.org/call2recycle/ for information on recycling in your area.

FCC WARNING

This equipment has been tested and found to comply with the limits for
a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and the receiver. • Connect the equipment into an outlet different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

Usage

Home use only.

This product is not for sweeping or vacuuming. Remove large particles or substances from the floor before using.

In case of jam caused by small objects, please power off before removing the objects.

DO NOT STAND on the MOP POWERHEAD.

Do not let children use the mop as a toy.

Use a rag to clean the mop when it’s powered off.

Use caution when on floors that become slippery when wet with cleaning solutions or floor wax.

Battery & Charging

Do not use charger and/or charging batteries provided by any third parties.

Do not self-disassemble or remodel the battery and charger.

Keep the charger away from heating sources like radiators.

Do not touch the charger with wet cloths or wet hand.

Send used batteries for recycling by certified organizations.

If there is any damage to the cable please stop using and contact customer service or change the cable at the nearest service centre.

TECHNICAL PARAMETERS

Name	Parameters
Battery	2500mAh or 5000mAh
Voltage Rating	12.6V
Rated Power	63W
Power Charger Voltage	12.6 V / 0.5A / 100-240V～; 50/60Hz
Run-Time	2500mAh - 1.25 Hrs / 5000mAh - 2 Hrs
Charging Time	8 - 12h (If battery is at zero bars)
Product Dimensions	432mm x 140mm x 1276mm
Shipping Dimensions	457mm x 457mm x 115mm
Net Weight	2.6 Kg

Made in China

POWERMOP, LTD

HONG KONG

www.ymop.us

LIMITED ONE-YEAR WARRANTY

WARRANTY

Power Mop LTD (“YMop”) warrants, to the Purchaser of a YMop® product, against defects in material and workmanship for a period of one (1) year from the date of original purchase (the "Warranty Period"), subject to the following conditions, exclusions, and exceptions. During the Warranty Period, YMop® will, at YMop®’s discretion, replace or provide labor and parts to correct any such defects. The responsibility of YMop® is limited solely to the repair or replacement of the YMop® product and accessories (excluding the mop heads) at YMop’s option.

WHAT THIS WARRANTY DOES NOT COVER

This Warranty does not cover:

1. normal wear and tear;
2. any YMop® product that has been tampered with or modified in any way;
3. damage caused by misuse, abuse, acts of God, nature, vandalism, negligent handling or damage due to faulty packaging or mishandling in transit or otherwise;
4. damage or defects caused by or resulting from shipping or repairs, service or alterations to the YMop® product or to any of its parts or accessories;
5. products purchased from any party other than YMop or a retailer, dealer, or authorized by YMop;
6. products not maintained and utilized in accordance with the YMop User Guide;
7. products purchased or used outside the United States;
8. products not used under normal conditions;
9. claims made by other than the original purchaser (This Warranty is not transferable).

HOW TO MAKE A WARRANTY CLAIM

If your YMop® product fails to operate properly within the Warranty Period, please visit *www.ymop.us* to begin the Warranty claim process. If the unit is ultimately found to be defective in material or workmanship, YMop will repair or replace the YMop® product. Proof of purchase and a return authorization are required. At a minimum, a fee of $ 20 will be charged to cover the cost of return freight and handling.

OTHER WARRANTY TERMS

This Warranty shall be governed by and construed under the laws of the state of California. The Warranty Period will not be extended by any replacement or repair performed under the Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY YMop. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL YMop BE LIABLE FOR ANY SPECIAL, INDIRECT. INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO THE PURCHASER OR TO ANY OTHERS, WHETHER BASED IN CONTRACT. NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER.

Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to the Purchaser. This Warranty gives the Purchaser specific rights; the Purchaser may also have other rights that vary from state to state.

YMOP™

The Most Efficient Motor Mop on Earth !

Why Mop ?

Designed in the USA by Professional Cleaners !

