



RICCAR PARTS BOOK

**Supralite Models
RSL3 RSL3C RSL4 RSL5 RSL5.SAND RSL5C**

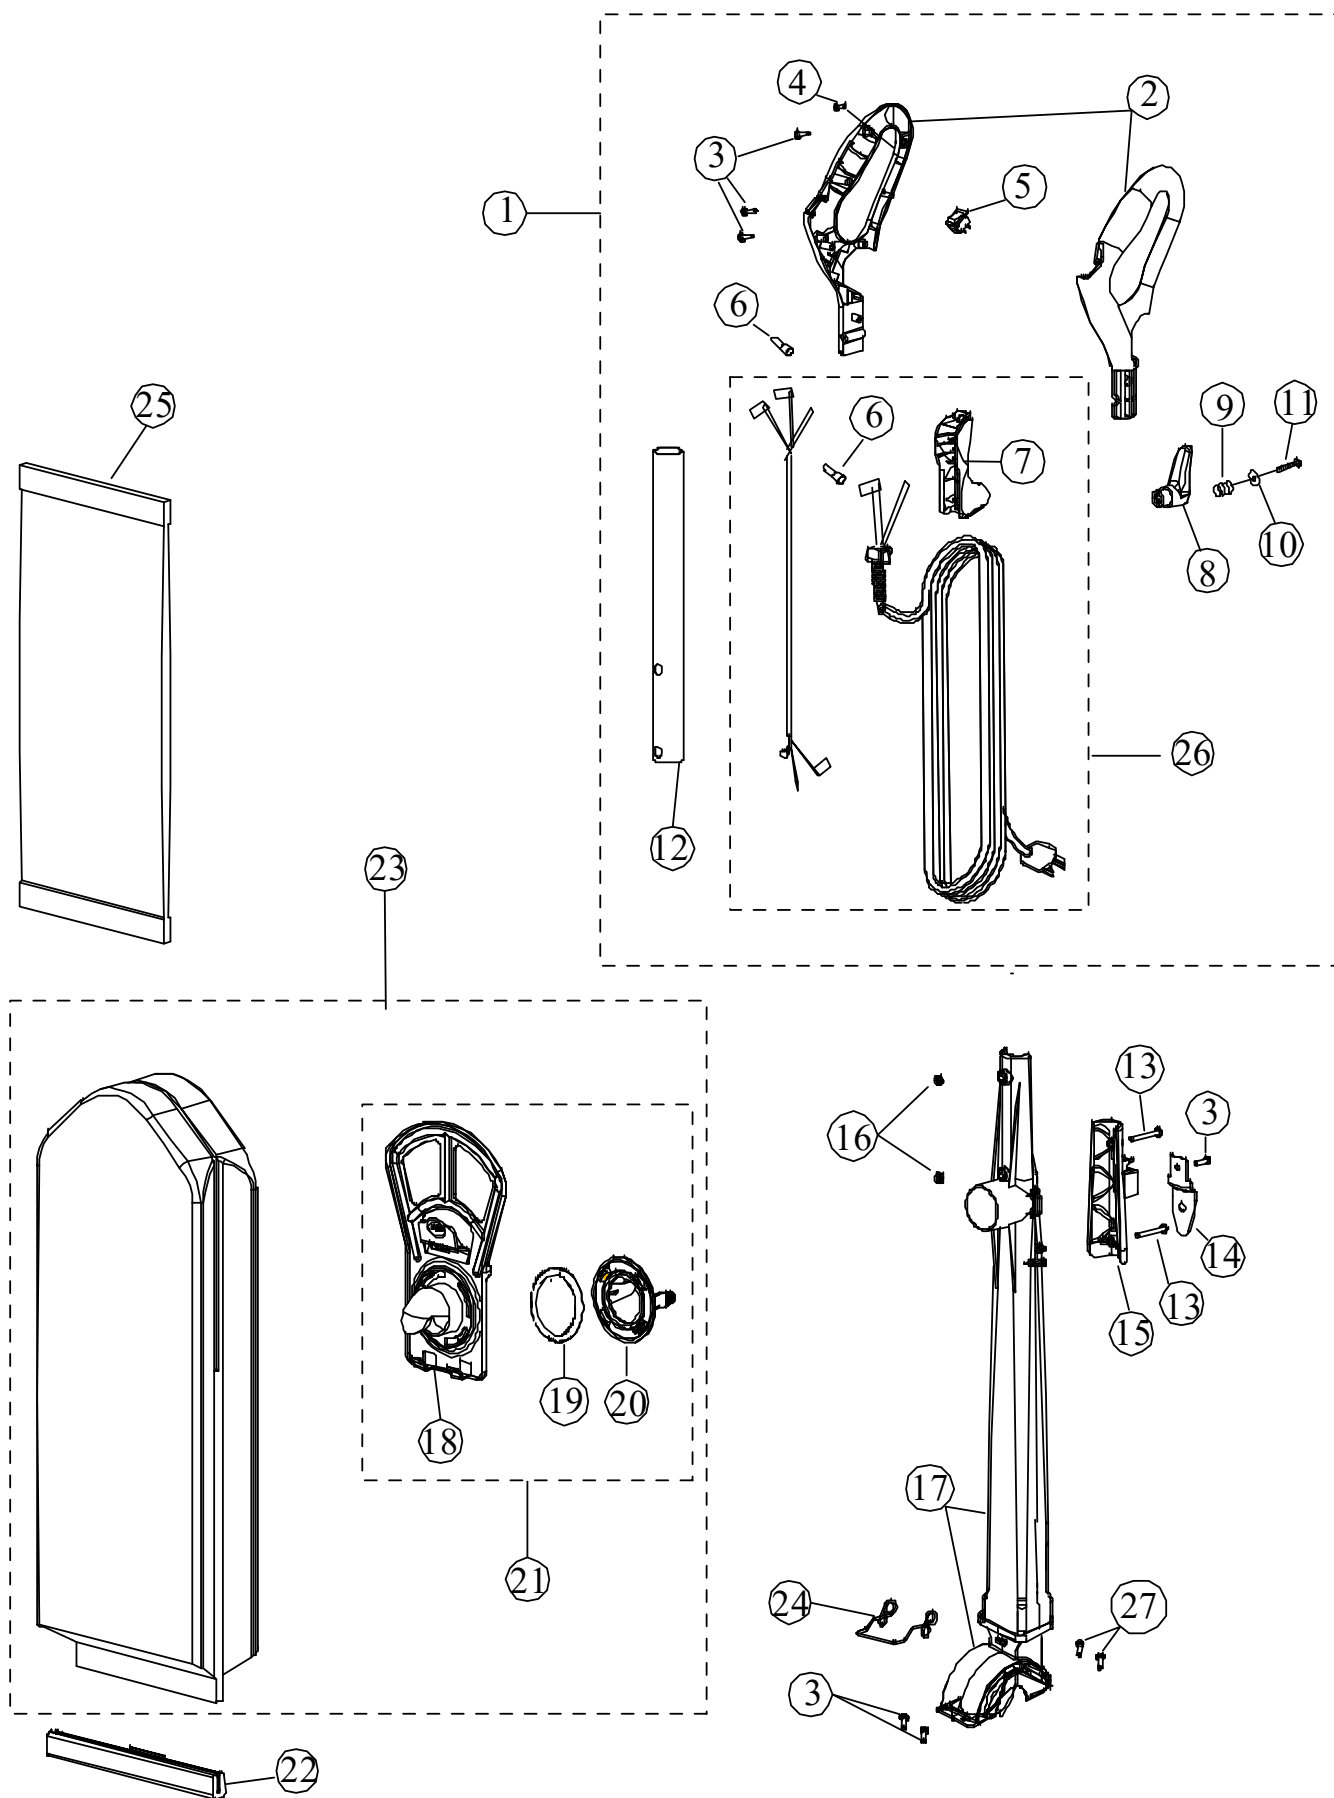


HANDLE AND BAG**Riccar Model RSL3 RSL3C RSL4 RSL5 RSL5.SAND RSL5C**

KEY	PART NUMBER	DESCRIPTION	KEY	PART NUMBER	DESCRIPTION
1	D431-3214	Handle Assembly Single Speed (RSL3)	18	B211-3614	Bag Holder
	D431-3100	One Speed Handle Assembly Commercial (RSL3C)	19	B211-6400	Bag Collar Seal
	D431-3714	Two Speed Handle Assembly Household (RSL4)	20	B211-2314	Bag Collar Ring
	D431-3314	Two Speed Handle Assembly Household (RSL5/RSL5.SAND)	21	D211-3614	Bag Holder Assembly
	D431-3400	Two Speed Handle Assembly Commercial (RSL5C)	22	B211-1014B	Lower Bag Clip No Print (RSL3/RSL4/RSL5/RSL5.SAND)
2	C431-3614	Handle Grip		B211-1914F	Lower Bag Clip Commercial Print (RSL3C/RSL5C)
3	A732-8314	Screw #8 x 5/8"	23	D211-6300	Cloth Bag Assembly
4	A732-8414	Screw #8 x 7/16"	24	B211-1204	Lower Bag Spring
5	A428-2014	One Speed Main Switch (RSL3/RSL3C)	25	ULW-PLAIN.2	Paper Bag (Single Bulk)
	A428-2200	Two Speed Main Switch (RSL4/RSL5/RSL5.SAND/RSL5C)		RSL-6	Paper Bag (6 Pack)
6	B123-0100	Wire Connector Medium		THB-ULW	HEPA Bag (Single Bulk)
7	B431-3314C	Handle Back		RFH-6	HEPA Bag (6 pack)
8	B431-3714	Plastic Cord Hook Swivel (RSL3/ RSL4/ RSL5/ RSL5.SAND)	26	D434-3143	Power Cord Assembly Household(RSL3)
	B384-0900	Metal Cord Hook (RSL3C, RSL5C)		D434-3414	Power Cord Assembly One Speed Commercial (RSL3C)
9	B430-0200	Upper Cord Hook Spring (RSL3/RSL4/RSL5)		D434-3643	Power Cord Assembly Household (RSL4)
10	A430-0405	Upper Cord Hook Washer		D434-1800	Power Cord Assembly Household (RSL5/RSL5.SAND)
11	A430-0205	Upper Cord Hook Screw		D434-1900	Power Cord Assembly Commercial (RSL5C)
12	B431-3504E	Steel Handle Tube	27	A732-9206	Screw #5 Hi Lo Self Threading
13	A432-0705	Screw #10 32 x 1.625			
14	B430-1205	Metal Lower Cord Hook			
15	B431-2914E	Handle Tube Bracket			
16	A432-0805	Hex Nut			
17	D431-3014	Lower Handle Upper Fan Housing (RSL3C/RSL5C)			
	D431-0200	Lower Handle Upper Fan Housing (RSL3/RSL4/RSL5/RSL5.SAND)			

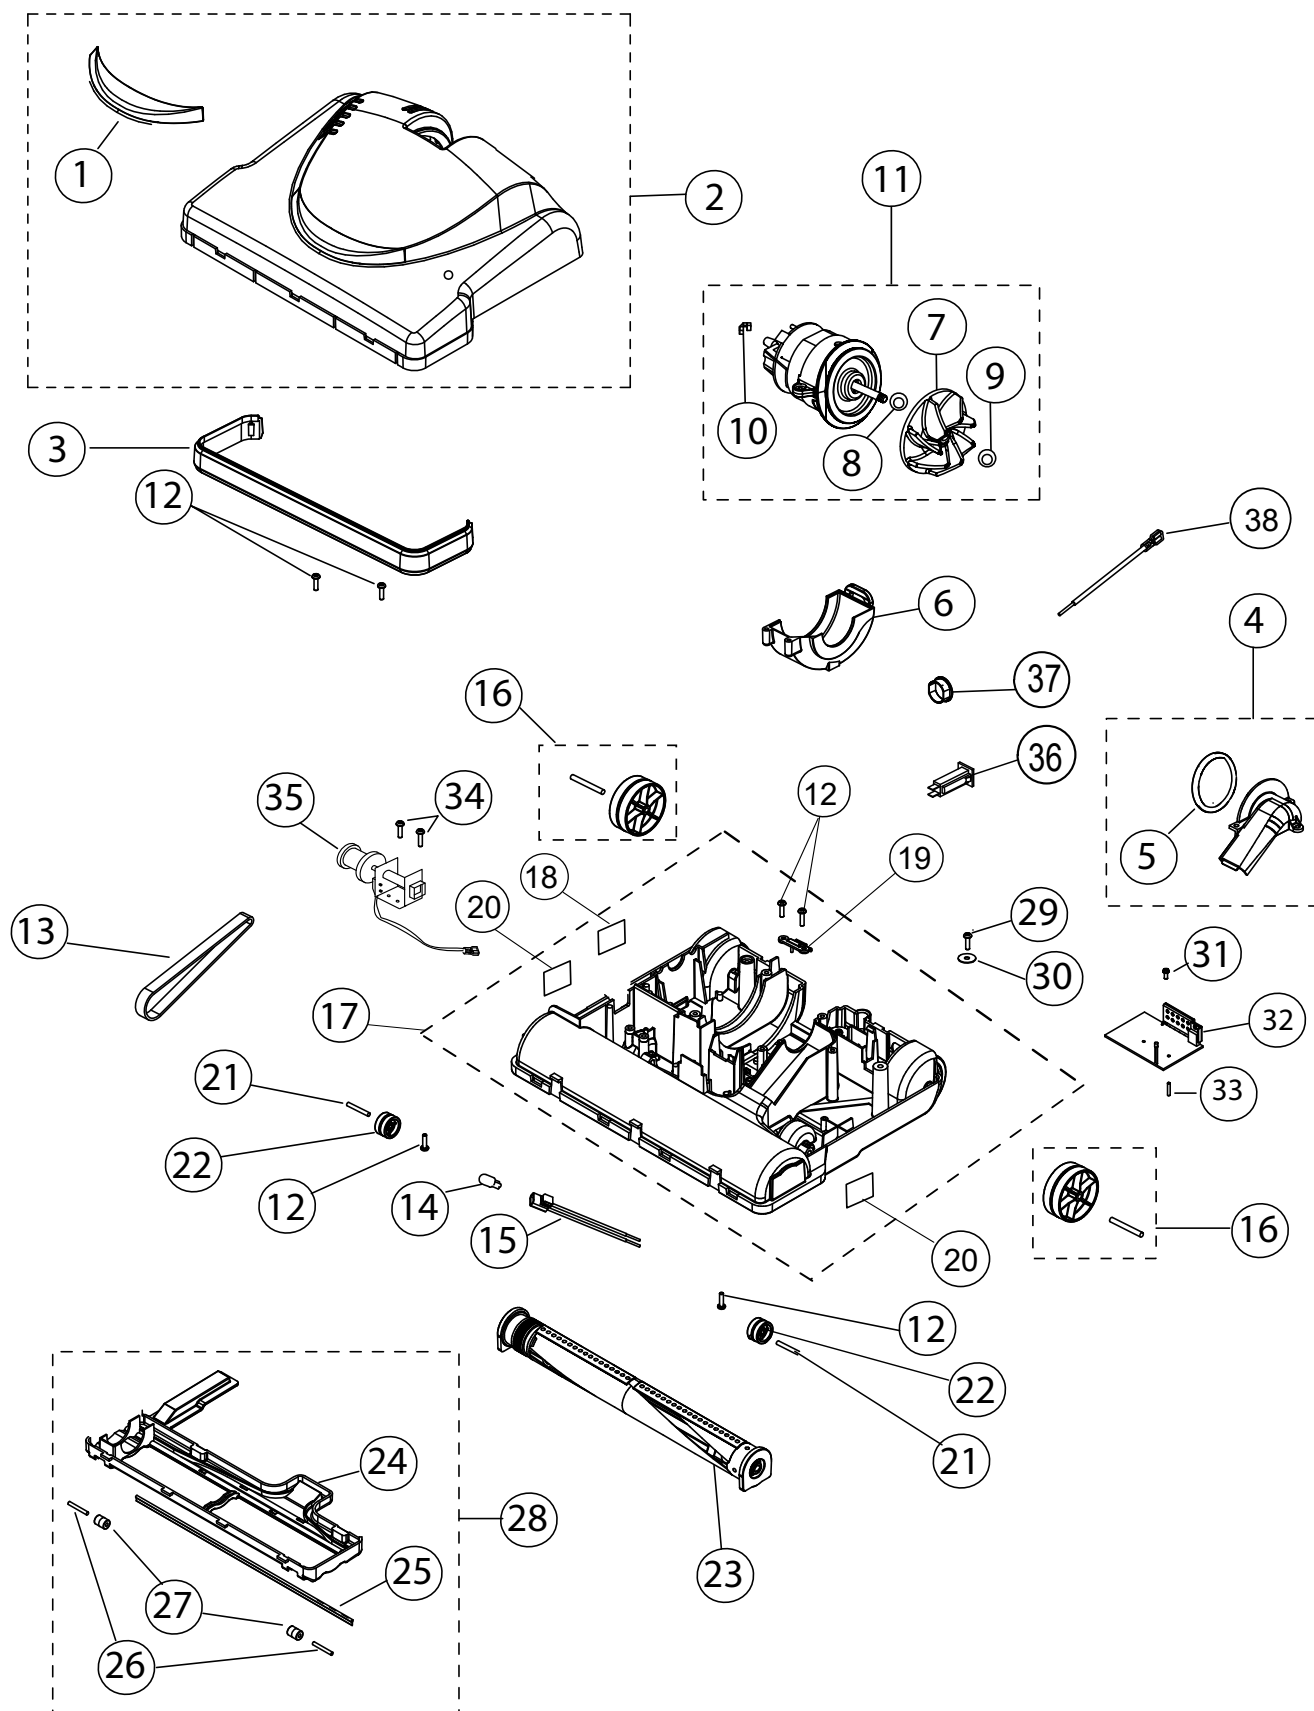

NOZZLE ASSEMBLY**Riccar Model RSL3 RSL3C RSL4 RSL5 RSL5.SAND RSL5C**

KEY	PART NUMBER	DESCRIPTION	KEY	PART NUMBER	DESCRIPTION
1	B018-0415	Headlamp Lens	18	B016-1914	Basetray Plug Non Hall Sensor Models (RDL3, RSL3C, RSL4)
2	Not Available	Nozzle Housing (RSL3, RSL3C, RSL4, RSL5, RSL5C, RSL5.SAND)	19	B016-1230	Upright Stop
	D017-2714	Black Replacement Nozzle Assembly (RSL3, RSL3C, RSL4)	20	B015-0400	Foam ULW Basetray
	D017-2914	Black Replacement Nozzle Assembly (RSL5, RSL5C, RSL5.SAND)	21	B010-0001E	Base Tray Wheel Axle
3	B029-0314	Furniture Guard	22	B010-0614	Base Tray Small Wheel
4	D123-3814	Fan Duct Cover With Seal	23	D012-2800	Wood Agitator (RSL3, RSL3C, RSL4)
5	C121-0000	Motor Seal Kit (Includes seals)		D013-0500	Steel Agitator Nylon Strips (RSL5, RSL5.SAND, RSL5C)
6	B123-3614	Lower Fan Housing		D013-0400	Steel Agitator White Strips
7	B123-3000B	Motor Fan	24	B015-2014	Base Plate No Wheels or Squeegee (RSL3, RSL3C)
8	A732-9305	Behind Fan Washer (Ametek Motor)		B015-3114	Raw Base Plate (RSL4, RSL5, RSL5.SAND, RSL5C)
	A733-3300	Behind Fan Washer (TEK Motor)	25	B015-3000B	Base Plate Squeegee
9	A733-2200	Washer (TEK Motor)	26	B370-1700B	Base Plate Axle
10	A732-3000	E-Clip .250" For Motor Shaft Flat Belt (RSL3, RSL3C, RSL4)	27	B370-1843	Base Plate Wheel
11	D113-1500	Motor Assembly Straight Shaft (RSL3, RSL3C, RSL4)	28	D015-2914	Base Plate with Wheels and Squeegee (RSL4, RSL5, RSL5.SAND)
	D113-1400	Motor Assembly Pulley Shaft (RSL5, RSL5.SAND, RSL5C)	29	A732-2500	Combination Screw
12	A732-8314	Screw Pan Head Hi Lo #8 x 5/8	30	B034-0100	Strain Relief Washer
13	B014-0814B	Flat Belt Bulk single (RSL3, RSL3C, RSL4)	31	A732-7300	Screw #4 X 5/16
	ULW-B2	Flat Belt 2 Pack (RSL3, RSL3C, RSL4)	32	B317-0000K	PC Board (RSL4)
	B014-1200	V Belt (RSL5, RSL5.SAND, RSL5C)		B317-1000BK	Hall Sensor PC Board (RSL5, RSL5.SAND, RSL5C)
14	A350-0000	Light Bulb	33	A018-1300	Plastic Dowel Pin (RSL5, RSL5, SAND/RSL5C)
15	A018-0900	Light Socket	34	A732-8414	Screw Hi/Lo #8 7/16"
16	D350-6631	Large Rear Wheel and Axle	35	D375-1400	Hall Sensor Assembly (RSL5, RSL5.SAND, RSL5C)
17	D016-1114	Base Tray Assembly with Plastic Upright Stop	36	A028-0114B	Circuit Breaker 5 Amp (RSL3, RSL3C, RSL4)
			37	A018-1414	Plug For Circuit Breaker Hole (RSL5, RSL5.SAND, RSL5C)
			38	B433-0341	Lead Wire Yellow (RSL4)

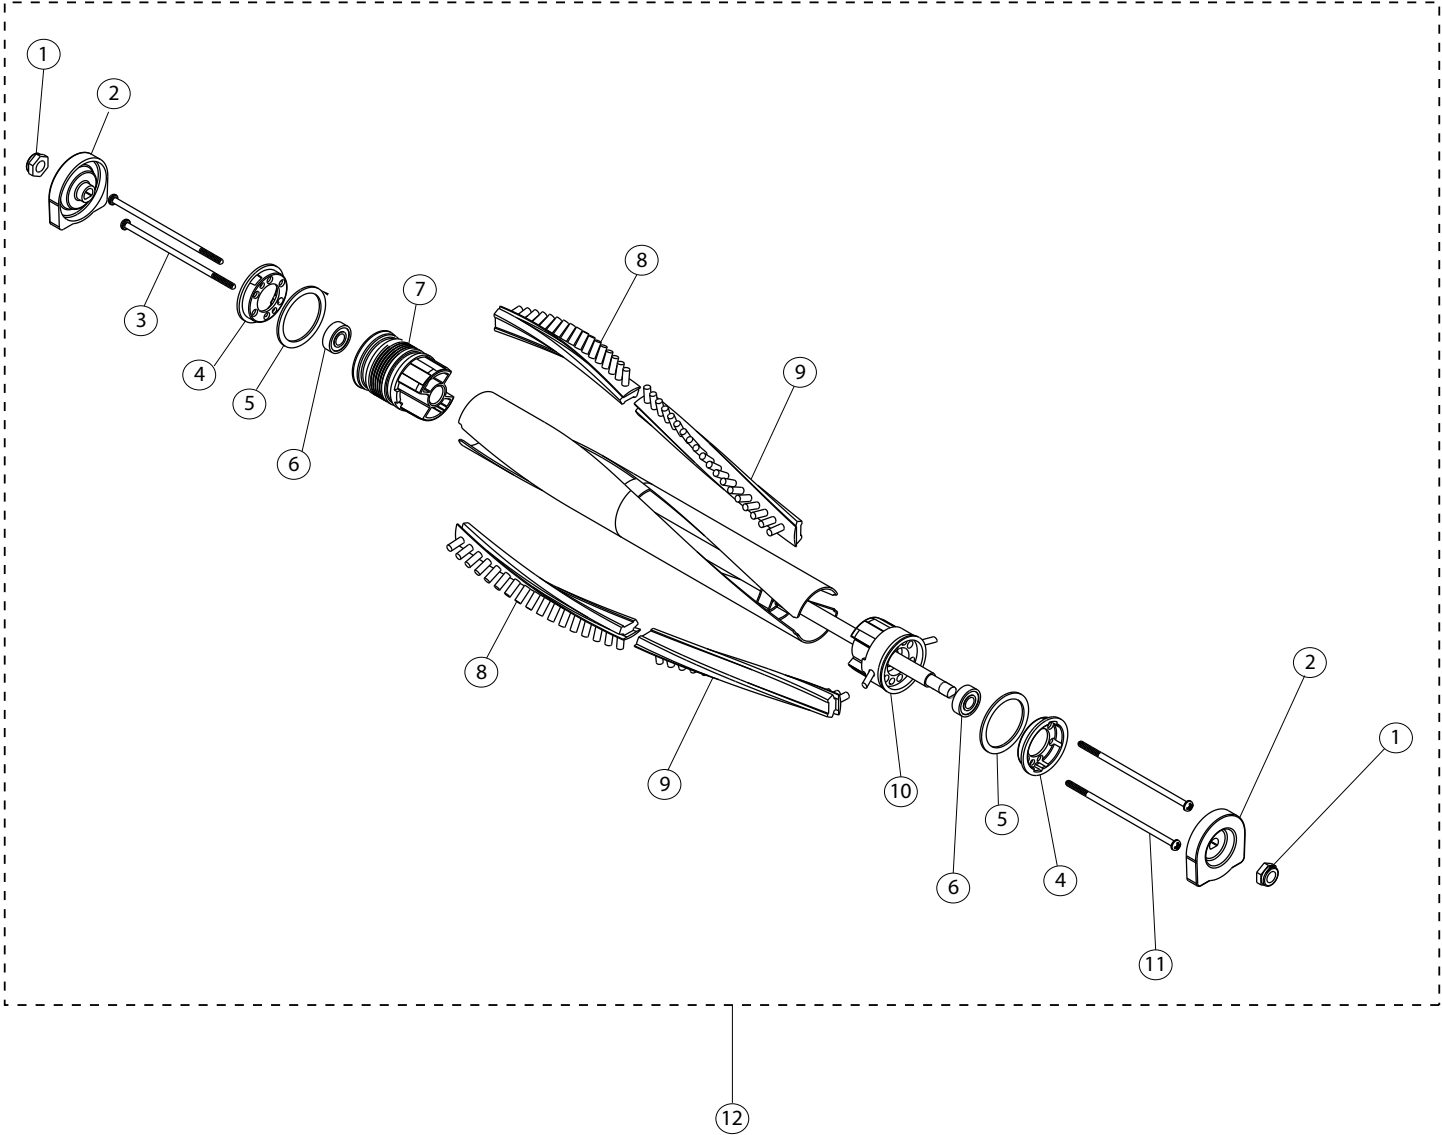

KEY	PART NUMBER	DESCRIPTION
1	A375-0100	1/4 - 28 Locking Hex Nut
2	B013-1600	Metal End Cap
3	A733-1810	Screw Pulley End 80mm
4	B475-1900	Retainer Ring
5	B375-3900	Felt Seal
6	A375-0200	Bearing
7	C013-0800	Pulley Non-Clamping Design for Poly V Belt
	B013-1400	Pulley Clamping Design for Poly V Belt
8	B013-1000	Short Brush Strip Nylon
	B013-0301	Short Brush Strip White
	B013-0400	Short Brush Strip Natural
9	B475-0400B	Long Brush Strip Nylon
	B013-0401	Long Brush Strip White
	B013-0300	Long Brush Strip Natural
10	C013-0900	Agitator Bearing Holder With Edge Brushes Non-Clamping
	B013-1500	Agitator Bearing Holder With Edge Brushes Clamping Design
11	A733-1800	Screw Non-Pulley End 40mm
12	D013-0500	Steel Agitator Assembly Clamping Design Tested