



RICCAR PARTS BOOK

**PRISTINE CHARISMA STARBRIGHT
CANISTER MODELS
STINE CHAR STAR ALL VERSIONS**

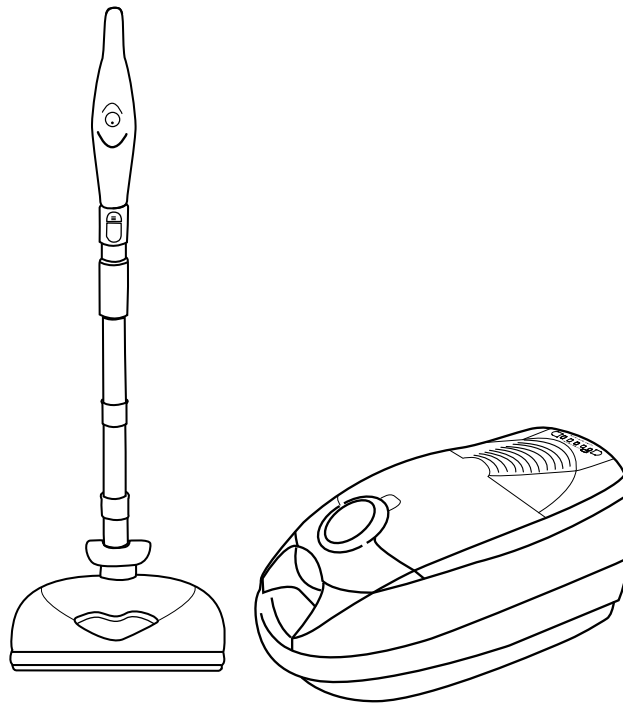

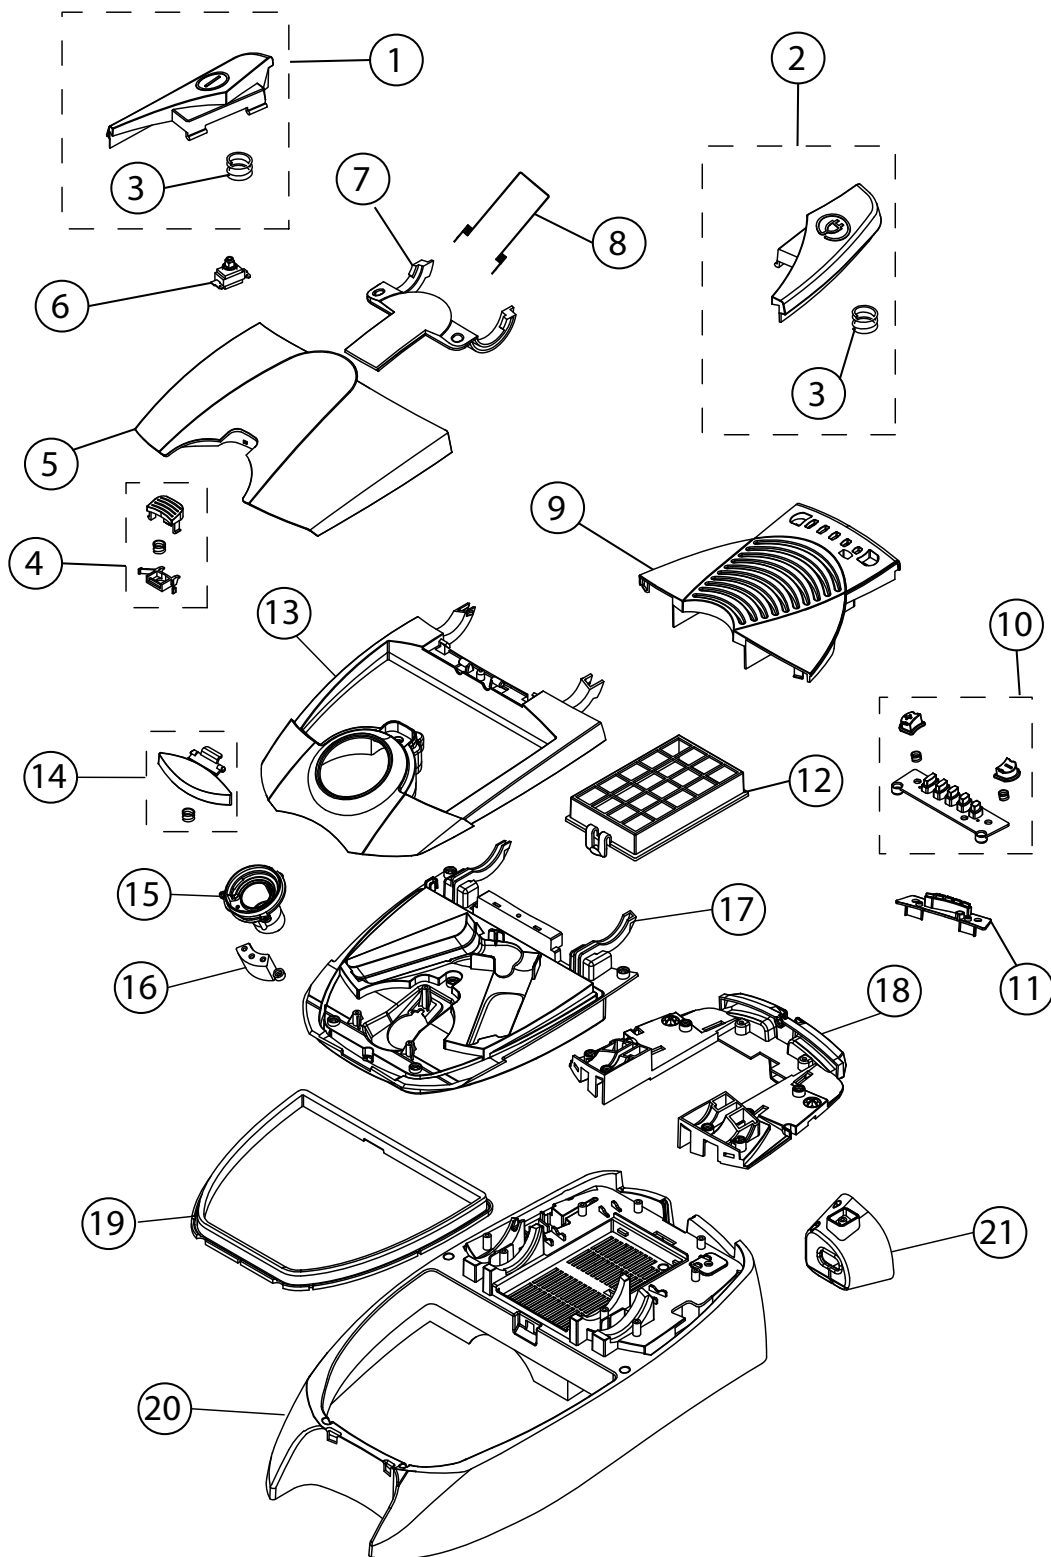


UPPER BODY

Riccar Model STINE CHAR STAR

KEY	PART NUMBER	DESCRIPTION
1	C390-1100	On/Off Switch Pedal Assembly
2	C390-1500	Cord Reel Pedal Assembly
3	B390-6600	Foot Pedal Spring
4	C390-1200	Tool Lid Latch Assembly
5	B390-23SL	Silver Tool Lid (STAR)
	B390-23CR	Red Tool Lid (CHAR)
	B390-23CL	Green Tool Lid (STINE)
6	B390-1900	Main On/Off Switch
7	B390-2200	Tool Lid Hinge
8	B390-2100	Tool Lid Spring
9	B390-41SL	Silver Filter Cover (STAR)
	B390-41CR	Red Filter Cover (CHAR)
	B390-41CL	Green Filter Cover (STINE)
10	C390-1600	Variable Speed Control Cover Assembly
11	B390-4200	Variable Speed Control Circuit Board
12	B389-0200	HEPA Filter Bulk
	RF18	Filter Set (Includes HEPA and Secondary)
13	B390-24SL	Silver Dust Cover Lid (STAR)
	B390-24CR	Red Dust Cover Lid (CHAR)
	B390-24CL	Green Dust Cover Lid (STINE)
14	C390-1300	Dust Cover Latch Assembly
15	B390-0500	Hose Inlet
16	B390-0600	Pin Socket (Includes Wire Harness)
17	B390-3100	Tool Base
18	B390-4000	Body Back Cover
19	B390-2800	Dust Seal
20	B390-36SL	Silver Upper Body Compartment (STAR)
	B390-36CR	Red Upper Body Compartment (CHAR)
	B390-36CL	Green Upper Body Compartment (STINE)
21	B390-3500	Cord Outlet Cover

LOWER BODY


Riccar Model STINE CHAR STAR

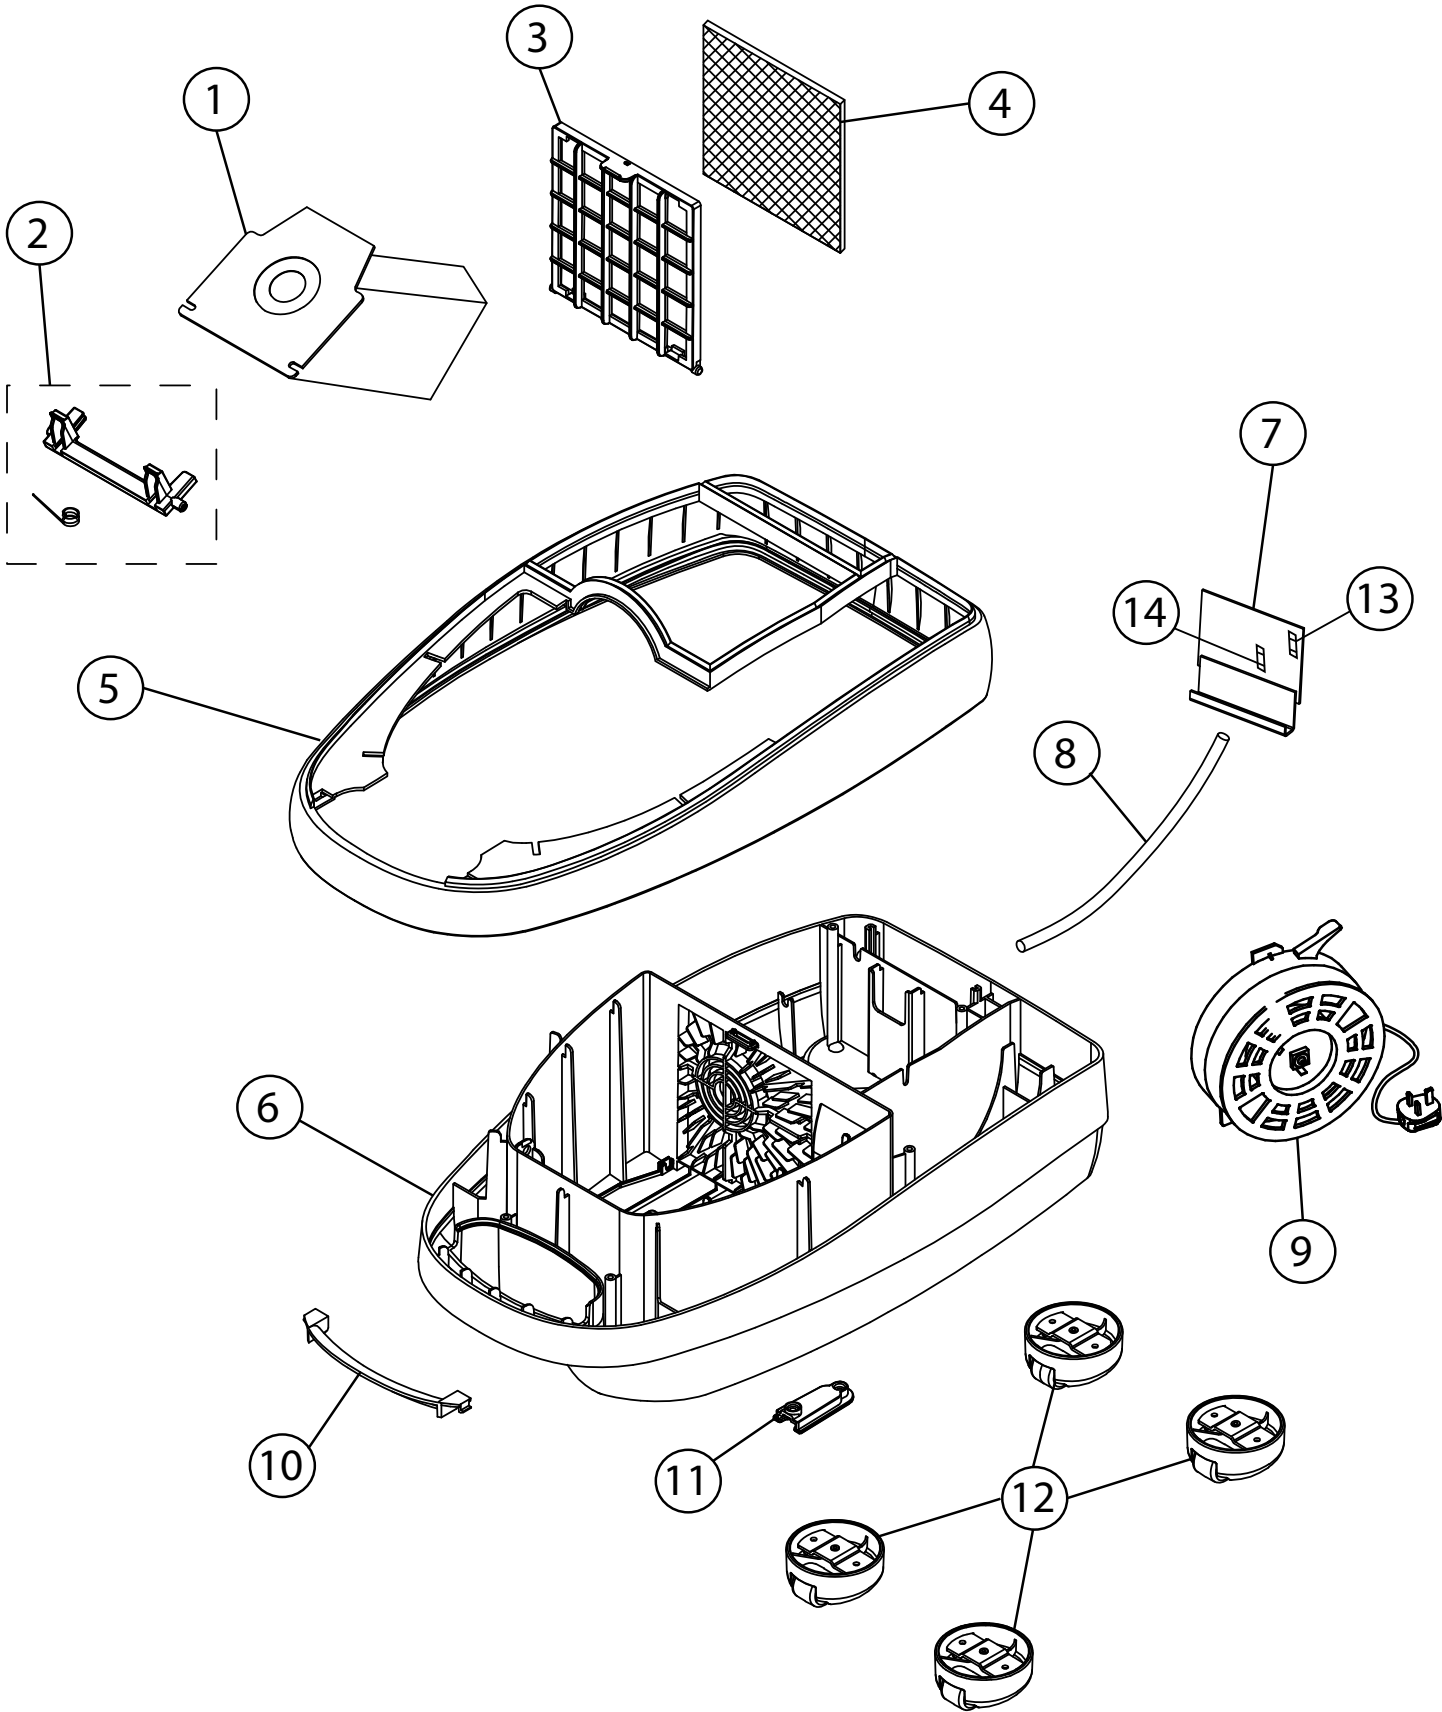


LOWER BODY

Riccar Model STINE CHAR STAR


KEY	PART NUMBER	DESCRIPTION
1	RHH-6	HEPA Bag (6 pack)
	TB-900	HEPA Bag (Bulk Single)
2	C390-0600	Bag Holder (Includes spring)
3	B390-4700	Filter Frame
4	C390-0700	Secondary Filter
	RF18	Filter Set (Includes HEPA and Secondary)
5	B390-3000	Furniture Guard
6	B390-3300	Lower Body Compartment
7	B390-1400K	Main PC Board
8	B390-3200	Pressure Switch Hose (FBI)
9	D390-1400	Cord Reel Assembly
10	B390-3400	Handle Cover
11	B390-1300	Wand Parking Bracket
12	C390-0800	Caster Wheel Assembly
13	B390-2500	Main PCB Fuse White (All Models)
14	B390-2600	Power Nozzle Fuse Clear (STINE, CHAR)

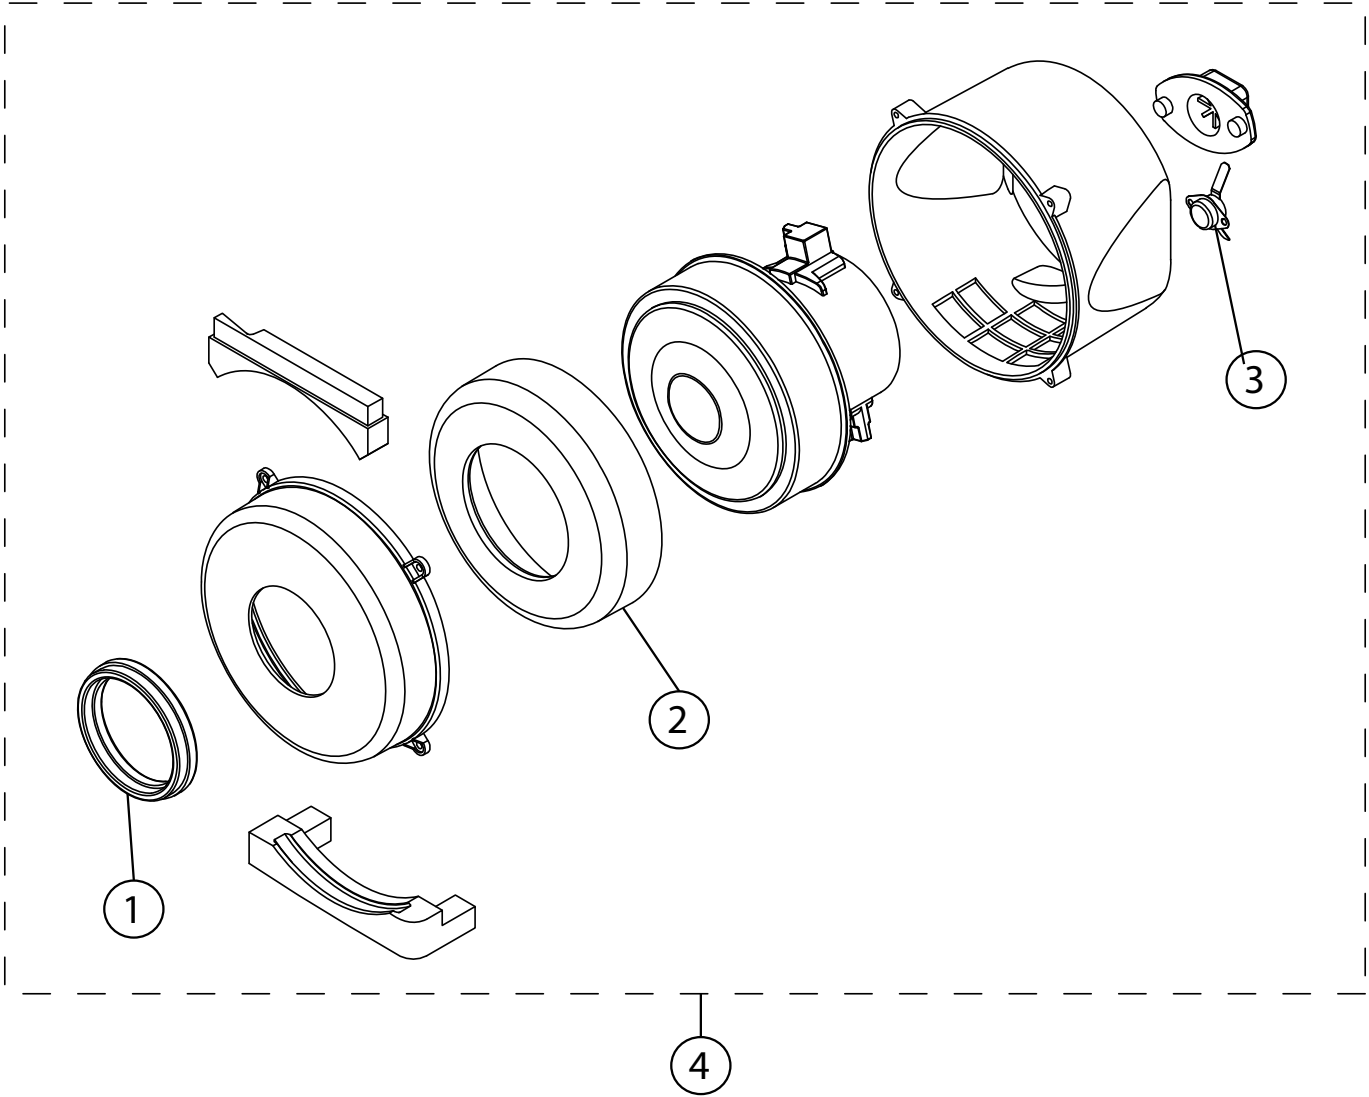

KEY	PART NUMBER	DESCRIPTION
1	B390-5700	Motor Seal Ring A
2	B390-6900	Motor Seal Ring B
3	B390-3900	Thermal Switch
4	C390-2100	Motor Assembly

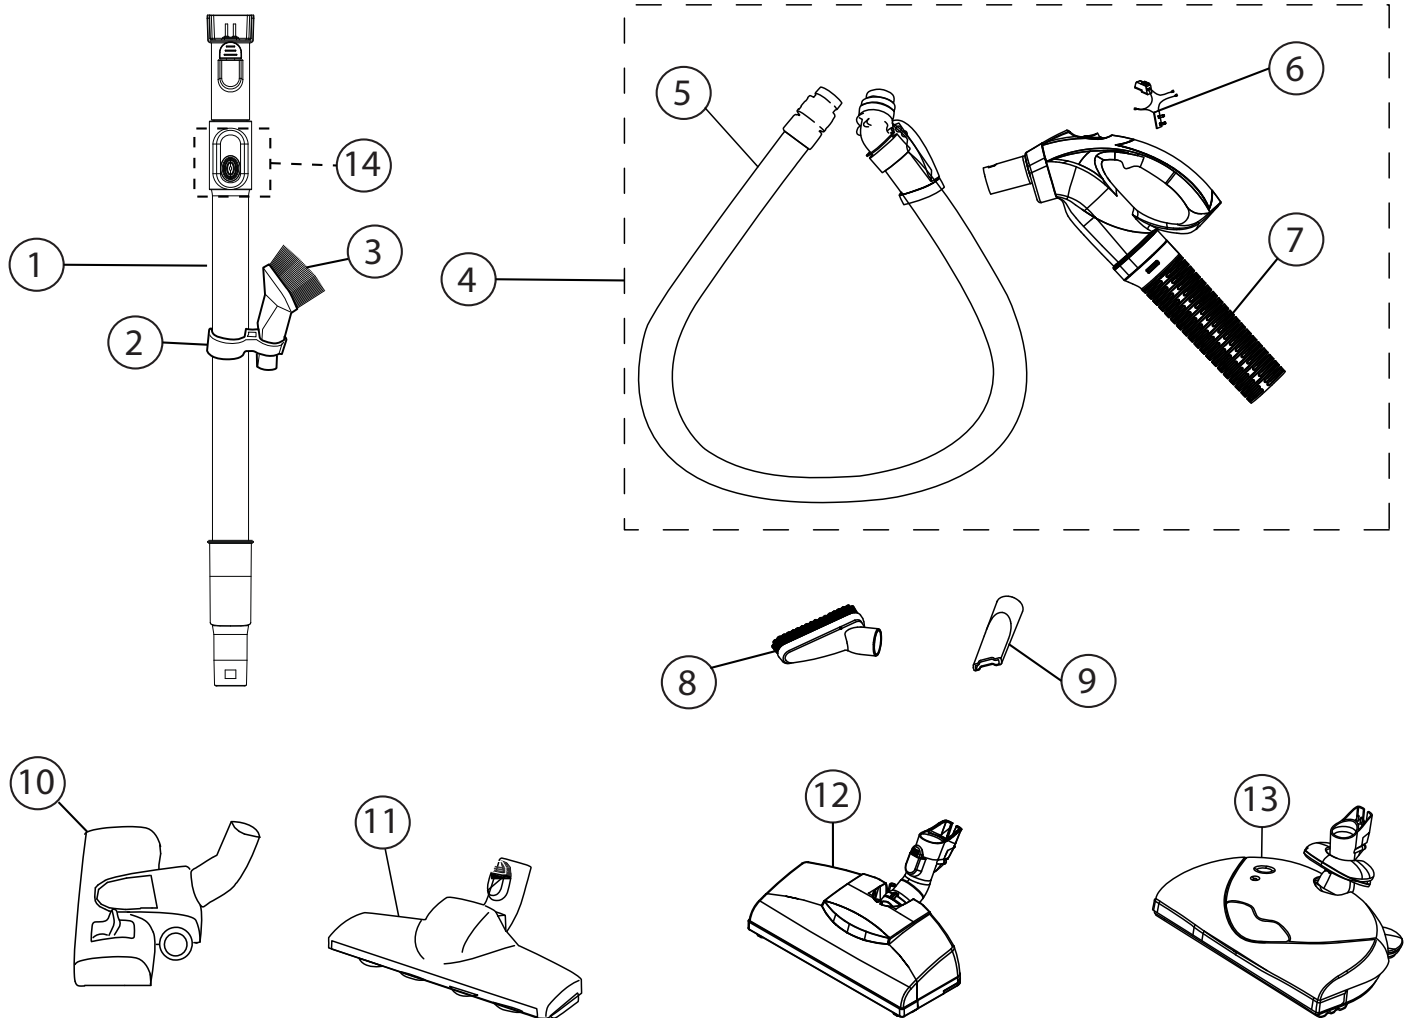

KEY	PART NUMBER	DESCRIPTION
1	B390-4500	Straight Suction Wand (STAR)
	D390-4600B	Powered Wand (STINE, CHAR)
2	C351-1843	Straight Suction 3 in 1 Tool Holder (STAR)
	B390-6114	3 in 1 Tool Holder (STINE, CHAR)
3	C351-1014	3 in 1 Tool
4	Not Available	Straight Suction Hose Assembly (STAR)
	D390-2018	Powered Hose Assembly (STINE, CHAR)
5	Not Available	Powered Hose Only No Ends (STINE, CHAR)
6	Not Available	Hose Handle Board (STINE, CHAR)
7	B390-4800	Hose Strain Relief
8	C390-0400	Dusting Brush Assembly
9	B390-1800	Crevice Tool
10	RBFT	Rug Floor Tool
11	RSS-B	Soft Sweep Floor Tool
12	Not Available	Compact Power Nozzle (CHAR) Breakdown on separate page
13	RPB-100S.6	Full Size Power Nozzle (STINE) Breakdown on separate page
14	WND-KIT	Wand Repair Kit (Button, Latch, and Spring)

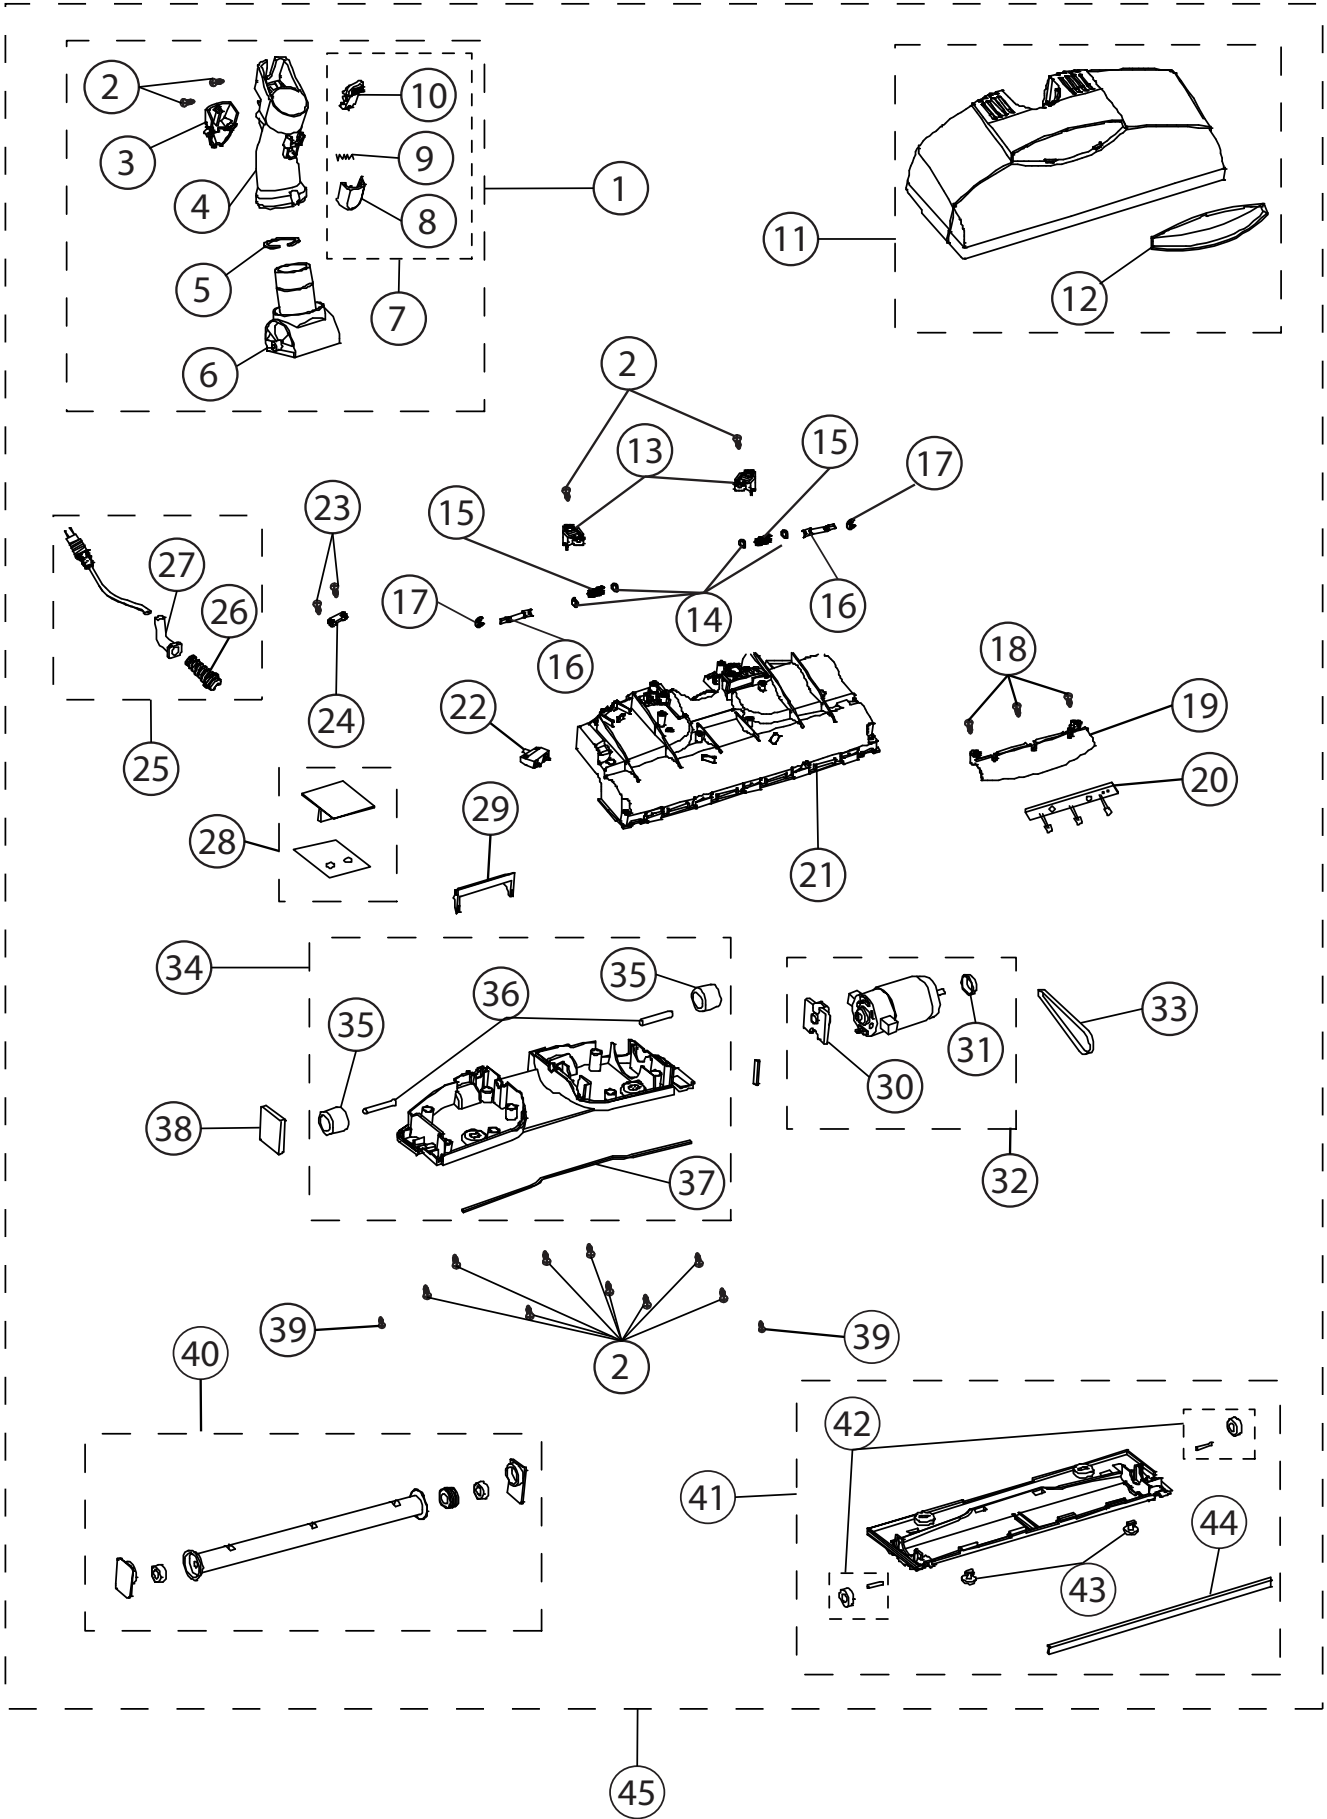


COMPACT POWER NOZZLE

Riccar Model CHAR

KEY	PART NUMBER	DESCRIPTION
1	D354-1000	Neck Assembly
2	A733-0614	Screw 7 X 1/2 #6 Hi Lo
3	B350-7214B	Plug Cover
4	B354-2400	Standard Neck for Compact Nozzle
5	B354-2800	Neck Lock Ring
6	C354-3000	Neck Pivot
7	D354-0900	Neck Button Assembly
8	B354-2700	Wand Lock Cover
9	B354-2600	Wand Lock Spring
10	B354-2500	Wand Lock Button
11	D354-0800	Nozzle Cover with Lens (Black Replacement)
12	B354-1200	Headlight Lens
13	B354-4000	Neck Lock Cover
14	B354-3600	Neck Lock Washer
15	B354-3900B	Neck Lock Spring
16	B354-3700	Neck Lock Pin
17	A732-9700	Neck Lock E Clip 3/16" X 0.025"
18	A733-0705	Screw Pan Head 3mm X 8mm
19	B354-0300	LED Reflector
20	B354-4900	LED Board
21	B354-2300B	Basetray Cover
22	B354-0400	Circuit Breaker
23	A733-0814	Screw Black Panhead 3mm X 10mm
24	B354-1400	Cord Lock
25	D354-0100	Cord Assembly (Includes Strain Relief)
26	B354-4300	Strain Relief
27	B354-5300	Insultherm Tubing
28	D354-1500	PC Board
29	B354-0500	Motor Lead Cover
30	B354-3200	Rear Motor Mount
31	B354-1300	Front Motor Mount
32	D354-1100	Motor Assembly
33	B354-5200	Belt
34	D354-0300	Bottom Housing Assembly

KEY	PART NUMBER	DESCRIPTION
35	B354-1700	Large Wheel
36	B354-1600	Large Wheel Axle
37	B354-0900	Squeegee
38	B354-0600	Balance Weight
39	A733-0814	Screw Black Panhead 3mm X 10mm
40	C354-1300	Agitator Assembly
41	D354-0700	Baseplate Assembly
42	D354-0400	Small Wheel Assembly
43	B354-0700	Baseplate Locking Screws
44	B354-0100B	Baseplate Squeegee
45	RPB-40.4	Compact Power Nozzle (CHAR)

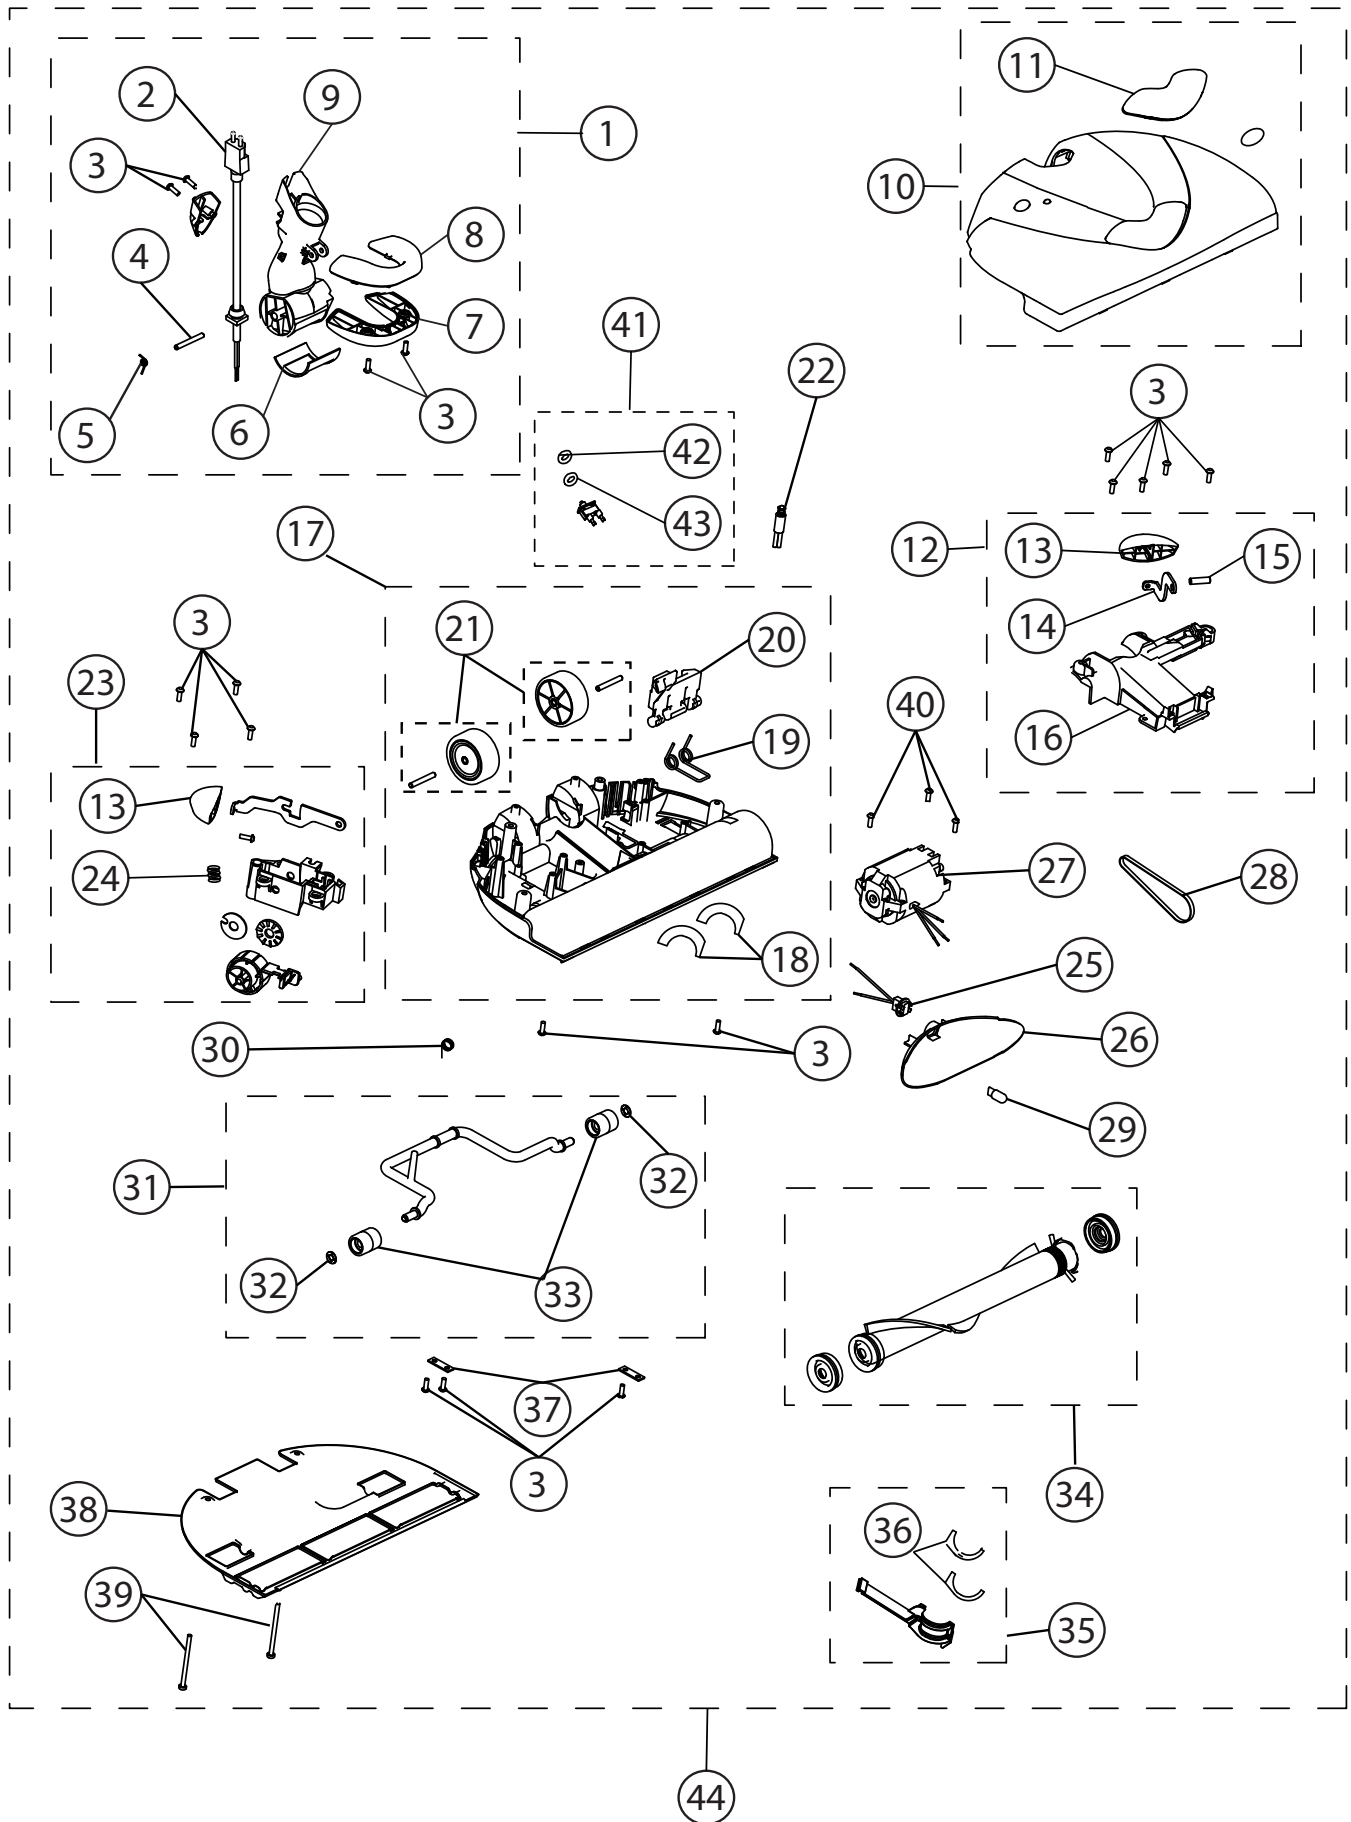


FULL SIZE POWER NOZZLE

Riccar Model STINE

KEY	PART NUMBER	DESCRIPTION
1	D350-4543B	Neck Assembly w/ Cord
2	B350-7314B	Canister Connection Plug
3	A732-8414	Screw Hi Lo #8 X 7/16
4	B350-7700	Wand Release Axle
5	B350-7600B	Wand Release Spring
6	B350-4714C	Teflon Seal
7	B350-7514B	Wand Release Lower Pedal
8	B350-7414B	Wand Release Upper Pedal
9	Order #1	Neck
10	C350-1000	Top Housing Assembly (Black Replacement)
11	B350-1515	Headlight Lens
12	D350-5100	Hidden Raceway Assembly
13	B350-5943	Pedal
14	B350-2601	Tilt Lock Lever
15	B350-2801	Tilt Lock Pin
16	B350-5114	Hidden Raceway
17	D350-9900	Bottom Housing Assembly
18	B350-8701B	Felt Seal for Bottom Housing
19	B350-3500	Tilt Lock Torsion Spring
20	B350-3400	Tilt Lock Link
21	D350-6531	Rear Wheel Assembly w/ Axle
22	C350-4300	LED Assembly
23	C350-9700	Height Adjust Assembly
24	B350-5300	Pedal Compression Spring
25	A350-0100B	Light Socket
26	B350-6197B	Reflector
27	A113-2200	Power Nozzle Motor
28	B350-2514	Belt
29	A350-0000	Light Bulb Xenon 12v
30	A350-2200	Height Adjust Tension Spring
31	C350-9800	Height Adjust Bar Assembly
32	B350-4000B	Retaining Ring 5/16"

KEY	PART NUMBER	DESCRIPTION
33	B350-3942	Height Adjust Wheel
34	D351-2100	Steel Agitator Assembly (See agitator page for breakdown)
35	D350-3314	Belt Housing with Seals
36	B350-8601B	Felt Seal for Belt Housing
37	C351-5700	Axle Stamping
38	C351-5800	Bottom Plate Assembly w/ Seals
39	A430-0205	Baseplate Screw #8 16 X 2.5
40	A733-0300	Motor Screw M3 X 21
41	D350-1100	2.5 Amp Breaker for dot 4 and Later Power Nozzles
	D350-1800	2.5 Amp Breaker for dot 2 and Older Power Nozzles with Ametek Motors
	D350-1700	3 Amp Breaker for dot 2 and Older Power Nozzles with Northland Motors
42	A733-0200B	Hex Nut for Breaker
43	A733-0100B	Lock Washer for Breaker
44	RPB-100S.6	Power Nozzle Assembly (STINE)

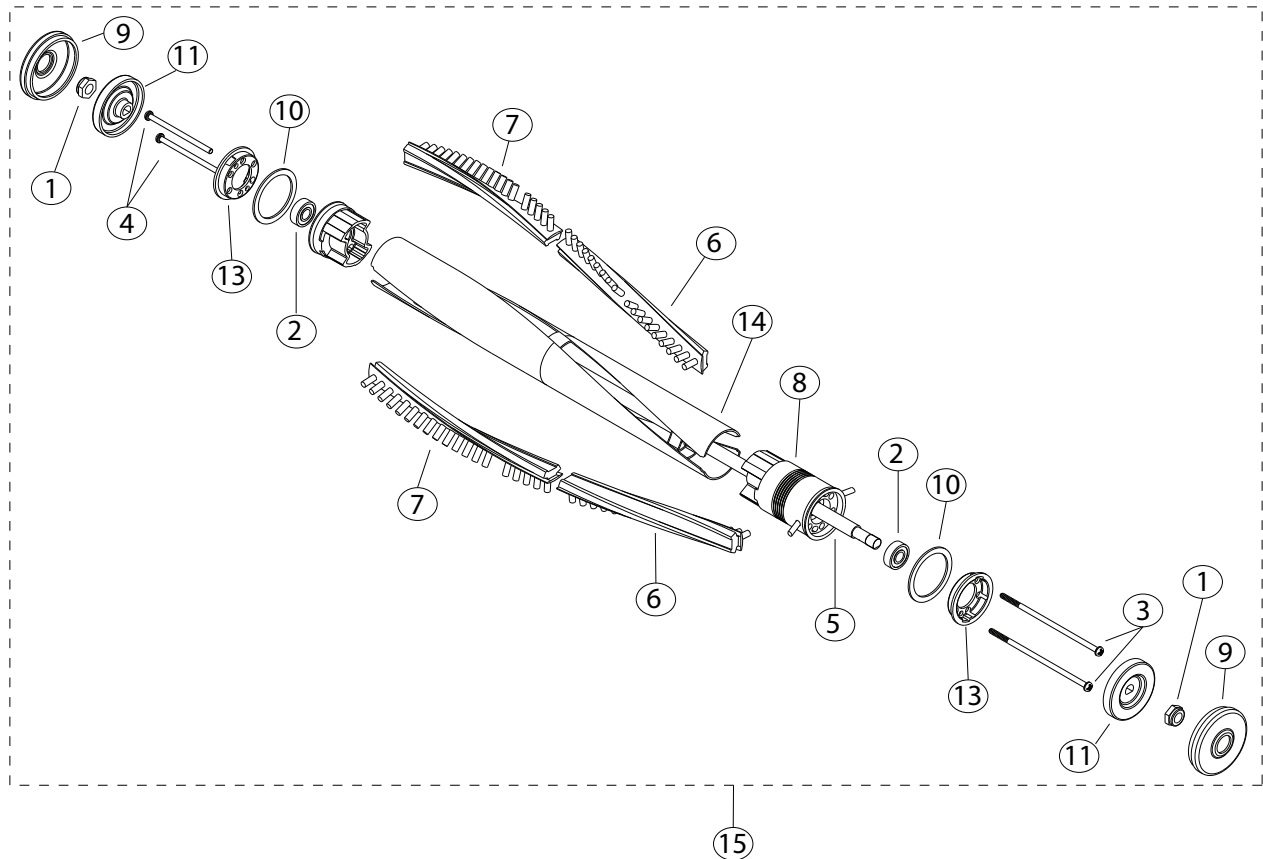

KEY	PART NUMBER	DESCRIPTION
1	A375-0100	Locking Hex Nut
2	A375-0200	Bearing
3	A733-1810	Clamped Agitator Screw 80mm
4	A733-1800	Clamped Agitator Screw 40mm
5	B351-2800	Agitator Shaft (Not Available)
6	B351-2000	Nylon Brush Strip Short (Standard)
	B351-1801	White Brush Strip Short
	B351-1800	Natural Brush Strip Short
7	B351-2100	Nylon Brush Strip Long (Standard)
	B351-1901	White Brush Strip Long
	B351-1900	Natural Brush Strip Long
8	B351-2500	Pulley (Not Currently Available)
9	B351-4400	End Cap Cover
10	B375-3900	Felt Seal
11	B375-3600	Metal End Cap
12	B475-1800	Bearing Cartridge
13	B475-1900	Retainer Ring
14	C351-2200	Agitator Core (Not Available)
15	D351-2100	Power Nozzle Agitator Assembly